NEC

Smart Communication Server

SL1100

Multi-Line Terminal

User Guide

Please read this manual carefully before operating this product and save this manual for future use.

Before using Your Terminal…

Thank you for purchasing NEC SL1100 system.

Due to the flexibility built into the system, your **Dialing Codes and Feature Capacities** may differ from those in this guide. Check with your NEC Authorized Supplier / System Administrator and make a note of any differences.

Installing the Handset and Line Cord

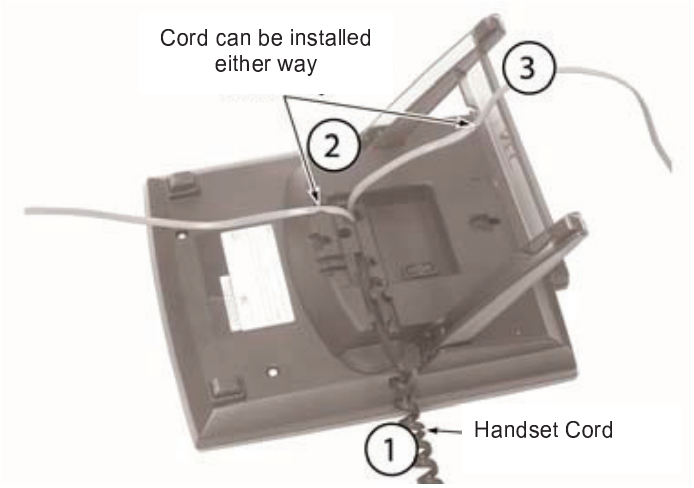

When installing the handset :

1. Make sure the handset cord is plugged into the handset jack on the telephone base.
2. The line cord routes through the channel on the telephone base.
3. Alternatively the line cord can route through the channel on the telephone legs.

Adjust the two-position Viewing Angle

To set the low viewing angle position:

1. Fold the legs all the way back.

To set the high viewing angle position:

1. Flip up the two leg supports.
2. Fold the legs back until the supports contact the base.

NEC Corporation reserves the right to change the specifications, functions, or features at any time without notice. NEC Corporation has prepared this document for use by its employees and customers. The information contained herein is the property of NEC Corporation and shall not be reproduced without prior written approval of NEC Corporation.

Copyright 2011, NEC Corporation

Printed in Japan

Using Your Terminal

■ IP4WW-( )*TXH-B TEL

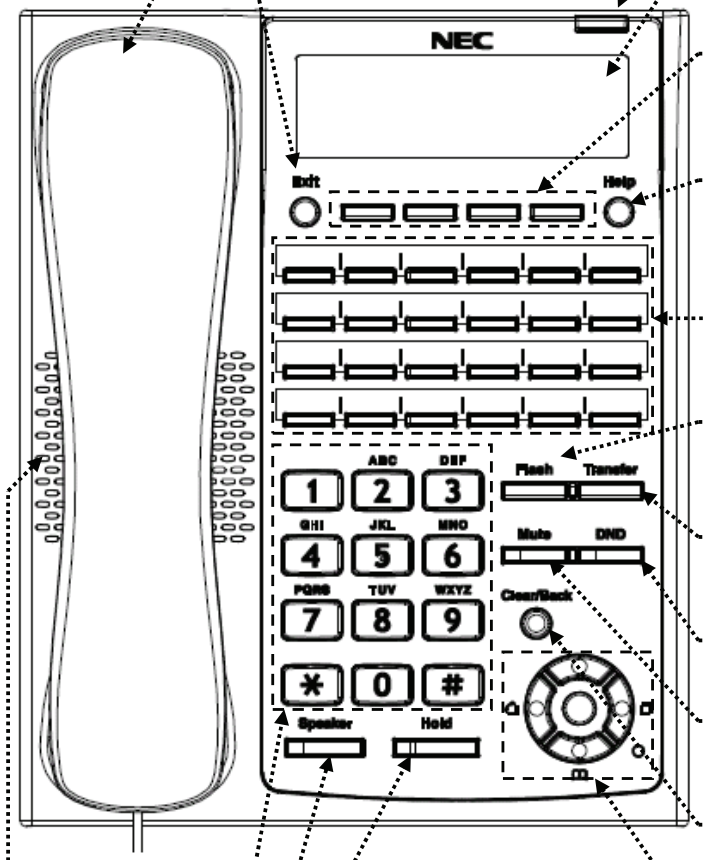

Handset

Exit Key
Exit any screen and return the display to "Time & Date".

Call Indicator Lamp
This lamp flashes fast when a call is ringing and flashes slower when a message has been left.

Alphanumeric Display
The LCD has 3 lines, 24 characters with backlight.

Soft Keys
The Soft Keys show the available features for your current activity. Any feature shown at the bottom of the LCD is available.

Help Key
The user can press this key followed by a programmable key to check what Line or Programmable Feature is assigned on the key.

Programmable Function Keys
Flexible Line keys or Feature Keys assigned by the System Administrator.

Flash Key
Press key to finish an outside call and hear the dial tone.

Transfer Key
Allows the extension user to transfer established calls to another extension.

DND Key (Do Not Disturb)
Setup a Do Not Disturb if pressed during a call.

Mute (Microphone) Key
Mute handset or Handsfree Microphone. LED lights when microphone is muted.

Clear/Back Key
Press this key to cancel the current action or delete a character.

Cursor Key
Access various features with simple operation.

Dial Keys

Speaker

HOLD Key
Press this key to place an internal or external call on hold.

Speaker Key
Controls the built-in speaker, which can be used for Handsfree dialing/ monitoring. LED on key lights when key is active.

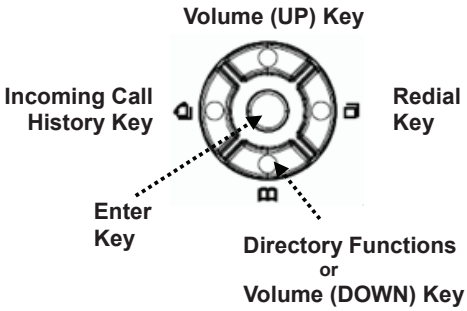

* *12 Programmable Function Keys are available for IP4WW-12TXH-B TEL.*
24 Programmable Function Keys are available for IP4WW-24TXH-B TEL.
** *The illustration shows IP4WW-24TXH-B TEL.*

Handsfree Options

- Handsfree lets you place and answer calls by pressing "Speaker" instead of using the handset.
- With Automatic Handsfree, you can press a Speaker Key without lifting the handset. Normally, you have Automatic Handsfree.
- Use Handsfree Answerback to answer a voice-announced Intercom call by speaking toward your phone without lifting the handset.

For Your Convenience

■ Programmable Function Keys

Programmable Function Keys can be assigned as “Trunk” Key and/or other Function Keys. You can just press the function key to activate the assigned function without dialing the Service Code.

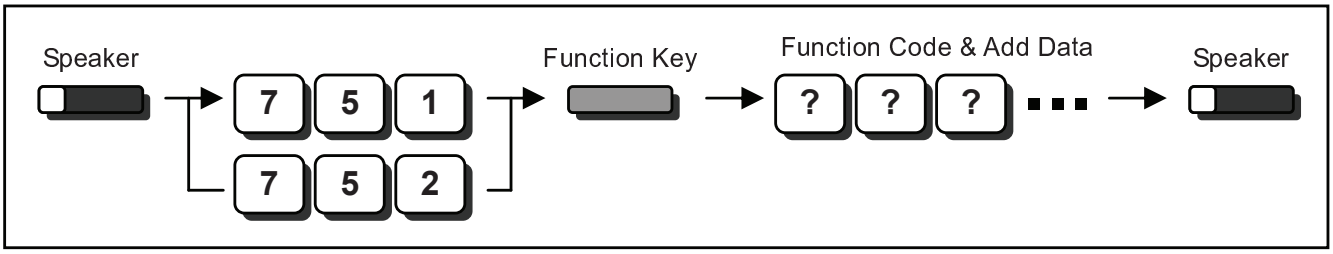

- *There are 2 levels of Function Keys. (General Keys : assigned by **751**, Appearance Keys : assigned by **752**)*
- *Appearance Keys have priority. You can overwrite the Appearance Key at the General Key.*
- *If you want to overwrite the General Key at the Appearance Key, you have to erase the Appearance Key by dialing “**752** + **000**” before General Key assignment.*
- *In the default setting, Programmable Function Key No. 1 to 12 is assigned as “Trunk” Key. If you want to assign Function Keys (General) at the unused Trunk Keys, these unused keys should be erased by dialing “**752** + **000**”.*
- *Programmable Function Keys can be erased by dialing “**752** + **000**” or “**751** + **00**”.*
- *Programmable Function Keys can be assigned by Soft Key operation as well.*

■ DSS / One-Touch Keys

Programmable Function Keys can be assigned as DSS (Direct Station Selection) or One-Touch Keys. You can place an Outside / Intercom Call by just pressing this key without dialing the number.

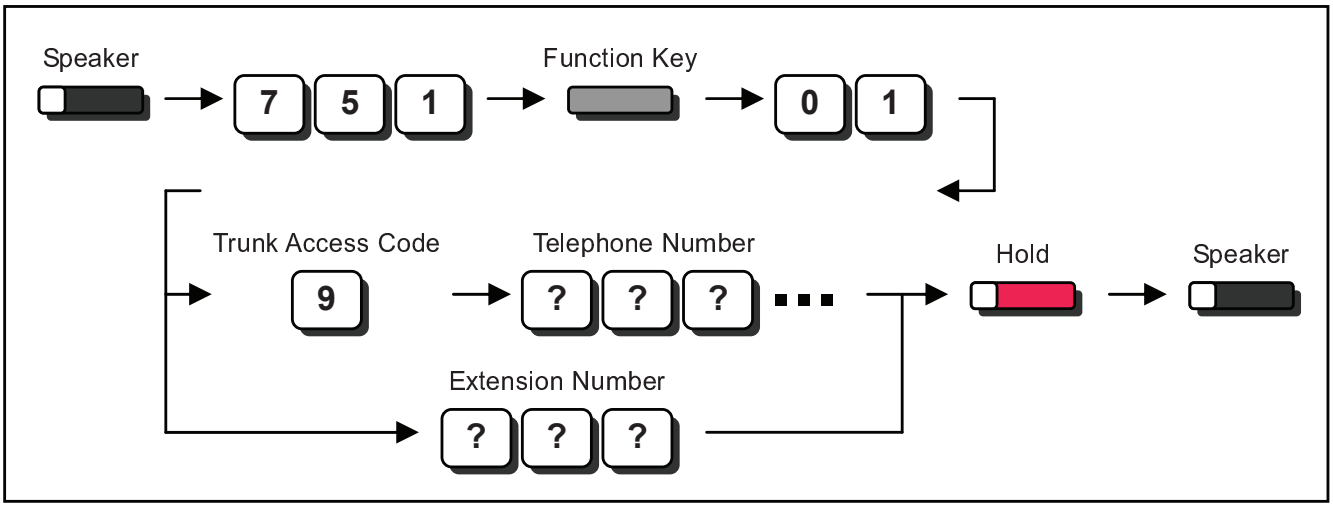

- *To change the Trunk Access Code, ask your NEC Authorized Supplier for the details.*
- *In the default setting, Programmable Function Key No. 1 to 12 is assigned as “Trunk” Key. If you want to assign DSS Keys to the unused Trunk Keys, these unused keys should be erased by dialing “**752** + **000**” before performing the above operation.*
- *For the DSS Key, the extension status can be indicated on the BLF. (idle : extinguished, Busy : lit)*
- *When you register a telephone number, the Trunk Access Code should be added in front of the number.*
- *Up to 36 dialing digits can be registered, but the name can not be registered.*
- *If you want to continue the operation, press Programmable Function Key instead of Speaker Key to finish.*
- *One-Touch Keys can be assigned using Soft Key operation.*

For Your Convenience

■ Abbreviated Dial (Speed Dial) Registration

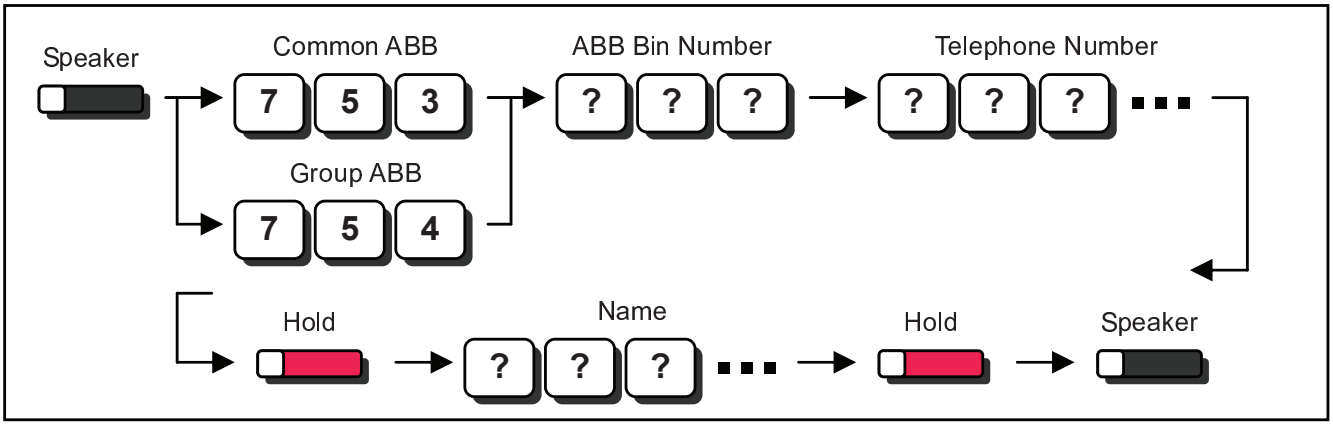

- *The number of digits dialed for Bin No. depends on the system setting (0-9<Only Group ABB> / 00-99 / 000-999).*
- *System setting is necessary for Group ABB function. Ask your NEC Authorized Supplier for the details.*
- *Name can be entered by Dial Pad Keys. (See below)*
- *Up to 36 dialing digits can be registered, and up to 12 characters can be registered as name.*
- *If you want to continue the operation, dial Bin No. instead of Speaker Key to finish.*
- *You can skip to enter the name. (No enter any character, then press "Hold" Key).*
- *You can erase the registered number & name by pressing "Exit" Key after dialing Bin No..*
- *Common Abbreviated Dial can be registered using Soft Key / Cursor Key operations.*

■ Entering Alphanumeric Characters

When you enter a name, use Dial Pad Keys to enter letters as below. For example, press "2" key once for "A", twice for "B", etc.

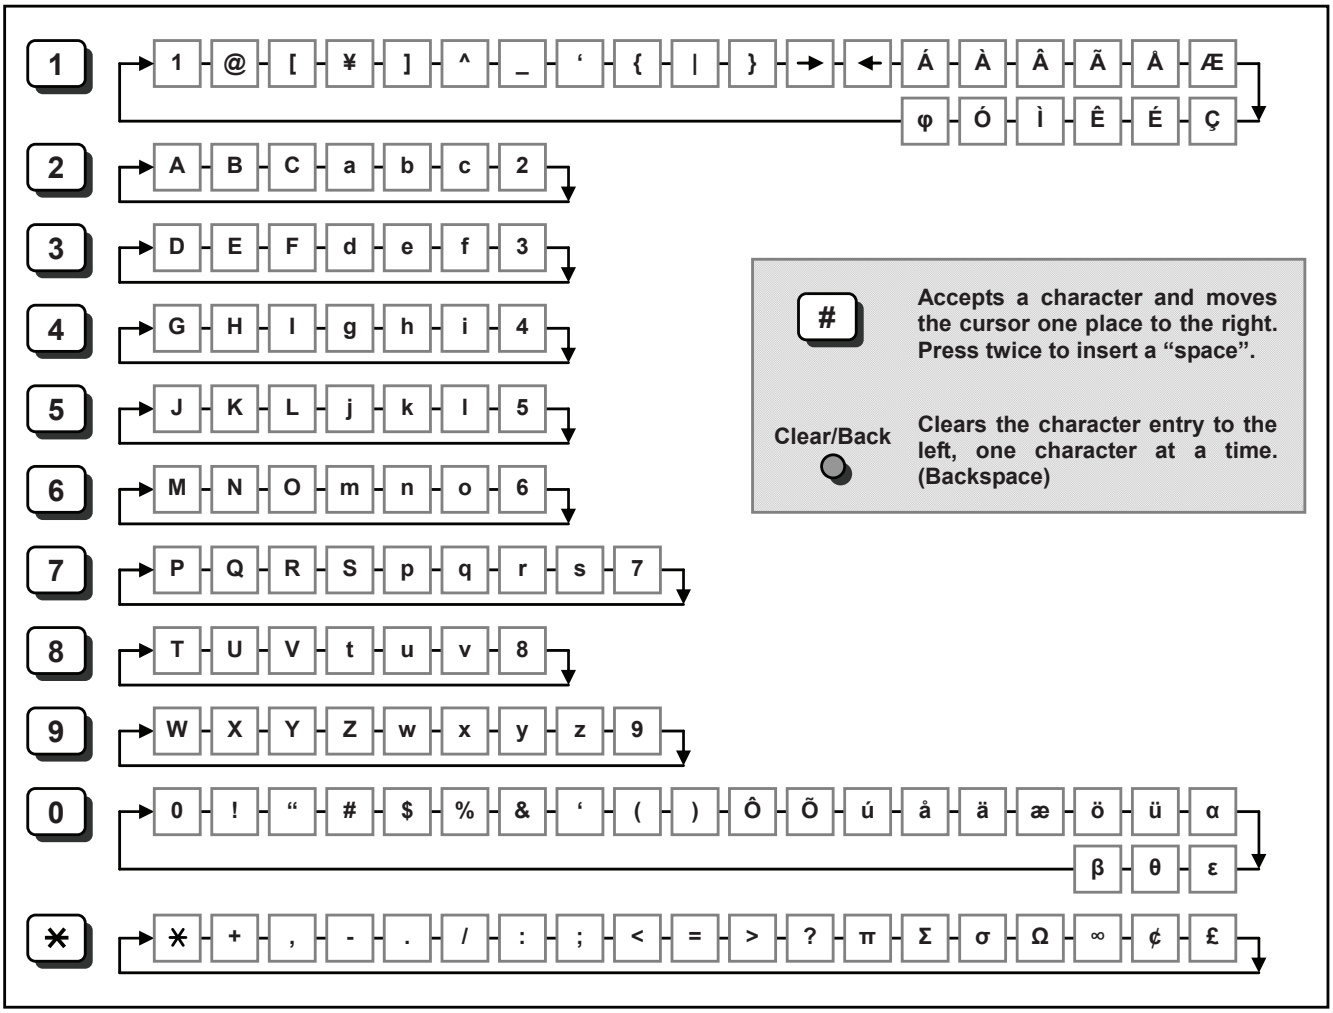
1 1 @ [¥] ^ _ ‘ { | } → ← Á À Â Ã Å Æ φ Ó Ì Ê É Ç
2 A B C a b c 2
3 D E F d e f 3
4 G H I g h i 4
5 J K L j k l 5
6 M N O m n o 6
7 P Q R S p q r s 7
8 T U V t u v 8
9 W X Y Z w x y z 9
0 0 ! “ # $ % & ‘ ( ) Ô Õ ú å ä æ ö ü α β θ ε
* * + , - . / : ; < = > ? π Σ σ Ω ∞ ¢ £
Accepts a character and moves the cursor one place to the right. Press twice to insert a "space".
Clear/Back Clears the character entry to the left, one character at a time. (Backspace)

Placing Calls

■ Place an Outside Call <Quick Access>

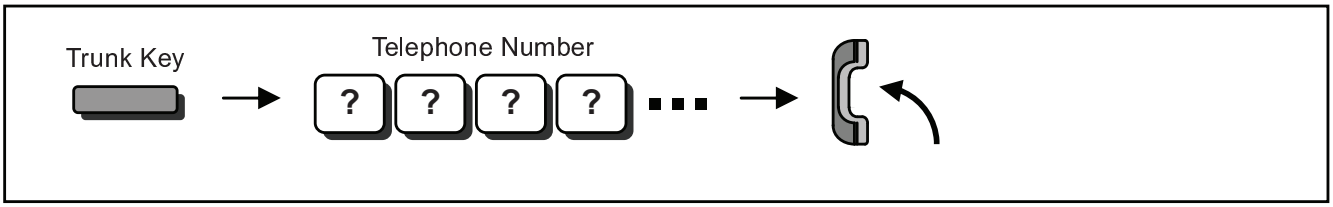

- *Listen to the Dial Tone before dialing a Telephone Number.*
- *You can have function keys for Trunks or Trunk Groups. Ask your NEC Authorized Supplier for the details.*

■ Place an Outside Call <Access by Code>

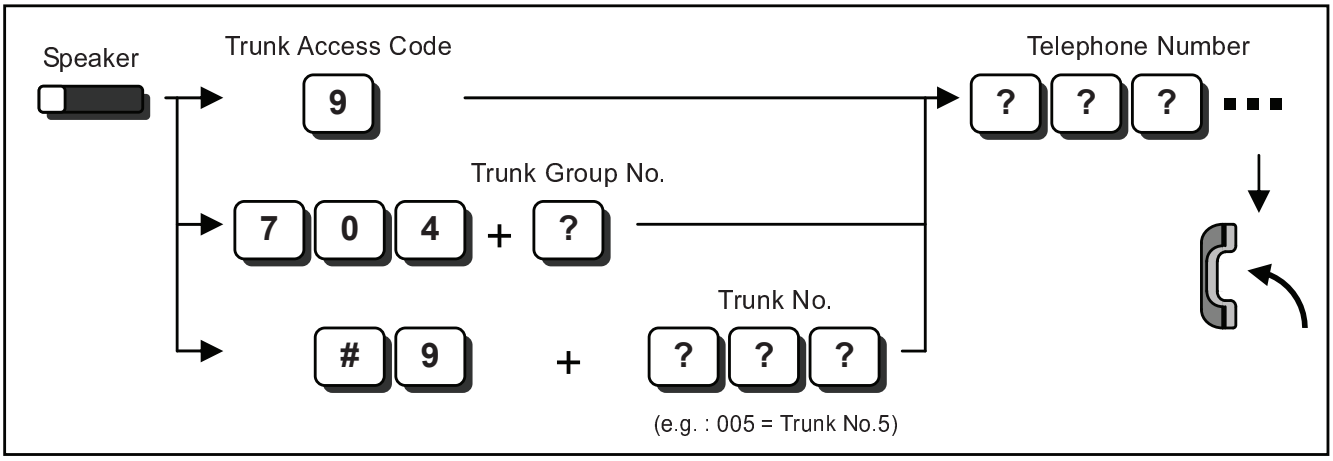

- *To change the Trunk Access Code, ask your NEC Authorized Supplier for the details.*
- *Listen to the Dial Tone before dialing a Telephone Number.*
- *If the Trunk Group number is greater than 10, you should enter 2 digits (e.g. 11 : Group 11) after dialing "704". Ask your NEC Authorized Supplier for the details.*
- *Ask your NEC Authorized Supplier for the Trunk Number dialing digits.*

■ Place an Intercom Call <Dial Access>

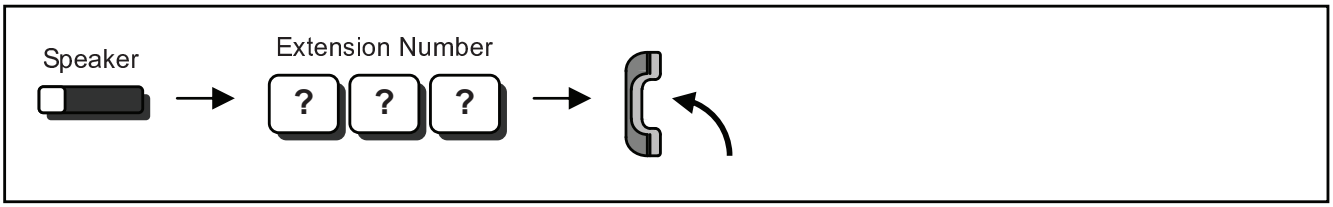

- *Your call will ring or voice-announce. If you hear ringing, wait for an answer. If you hear a beep, begin speaking. Dialing "1" changes voice/ring mode (if the destination is Multi-line Terminal).*

Placing Calls Quickly

■ Directory Dialing

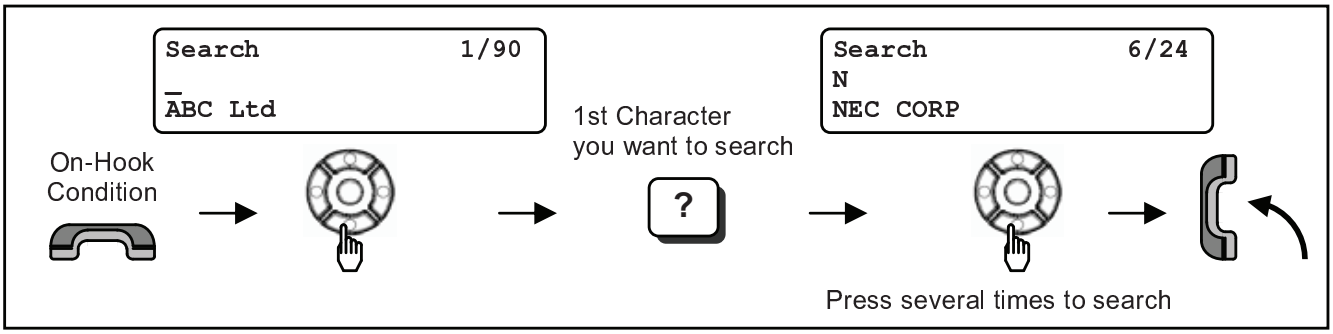

- *After searching the desired destination, press "Enter" Key to confirm the telephone number before lifting the handset, if necessary.*
- *You can enter more characters (up to 12) to make desired destination's search even more specific.*
- *You can also search the desired destination without entering the characters (press Cursor Keys only).*
- *To cancel the Directory Dialing operation, press "Clear/Back" Key.*
- *Directory Dialing can be activated using Soft Key operation.*

■ Last Number Dialing

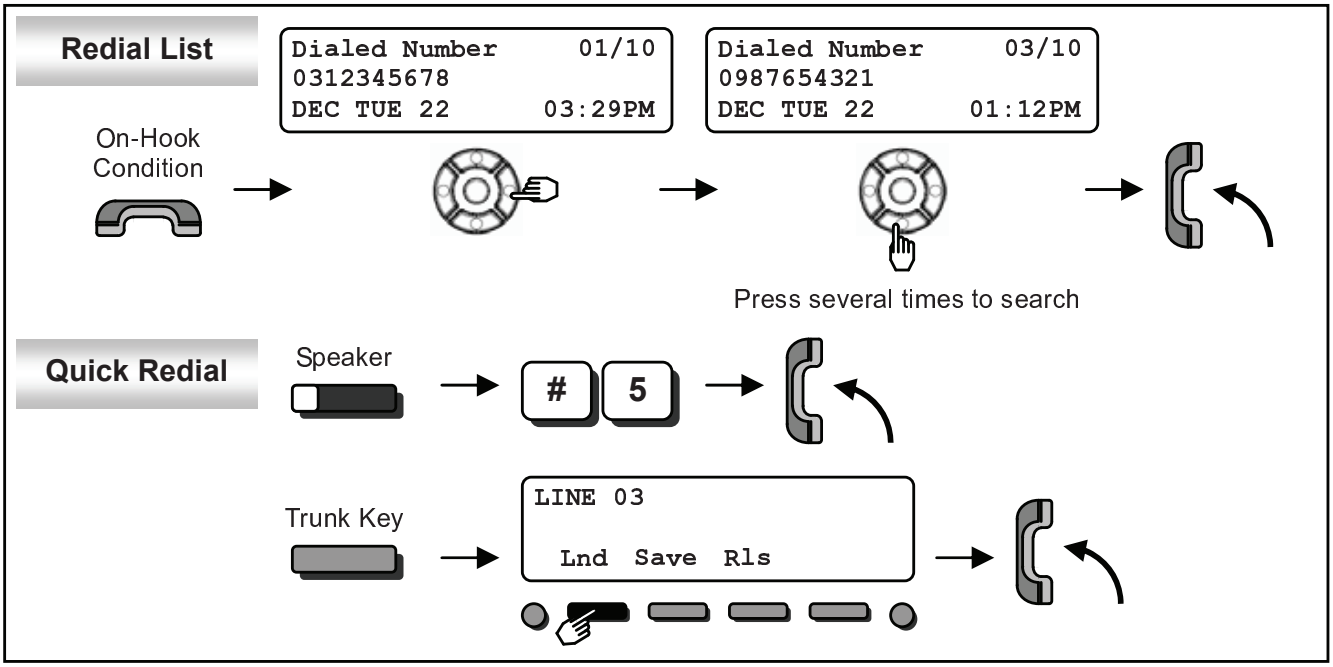

- *The system retains the last 10 numbers dialed, which can be reviewed and redialed.*
- *To cancel the Redial List operation, press "Clear/Back" Key.*

■ Callback by Received Number

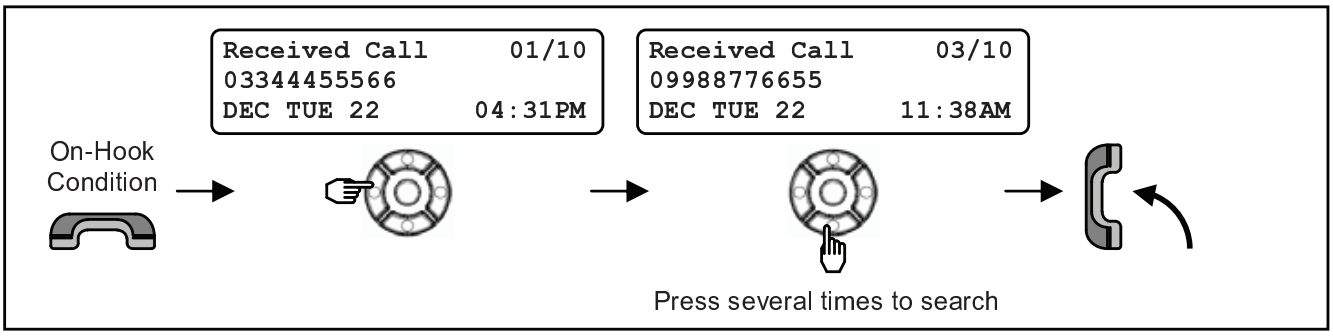

- *Caller-ID function is required to use this operation for outside calls. Ask your NEC Authorized Supplier for more details.*
- *To cancel the Callback operation, press "Clear/Back" Key.*

Placing Calls Quickly

■ Abbreviated (Speed) Dialing <for Outside>

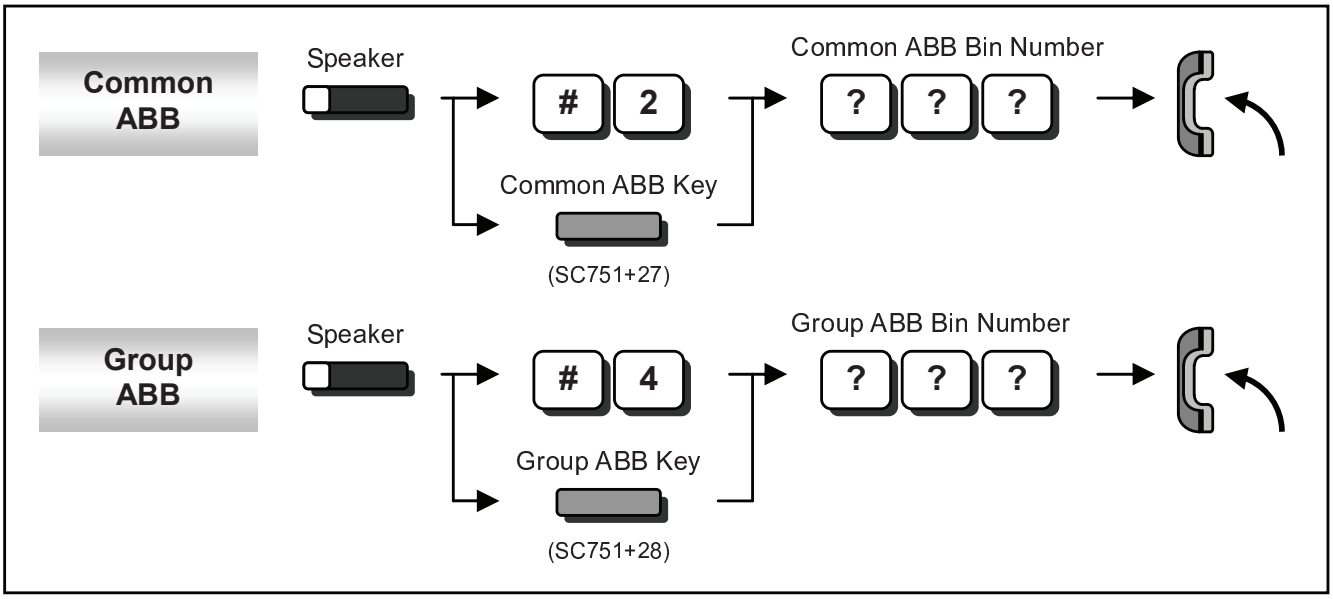

- *The digit of Bin No. depends on the system setting (0-9 <Only Group ABB> / 00-99 / 000-999).*
- *Telephone Numbers are pre-registered to the system.*
- *System setting is necessary for Group ABB function. Ask your NEC Authorized Supplier for the details.*
- *When you assign the Common ABB Key on the Programmable Function Key, "Press HOLD" is required after dialing the Function Code 27.*

■ One-Touch / DSS Call

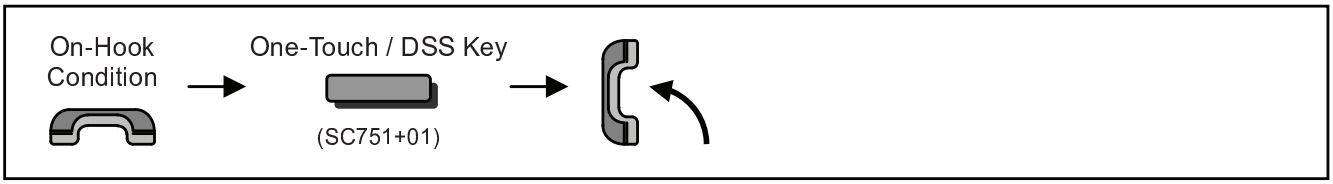

- *Telephone / Extension number should be pre-registered to a One-Touch / DSS Key.*
- *Trunk Access Code should be added in front of the Telephone Number.*

If your call doesn't go through…

■ Set Camp On / Callback

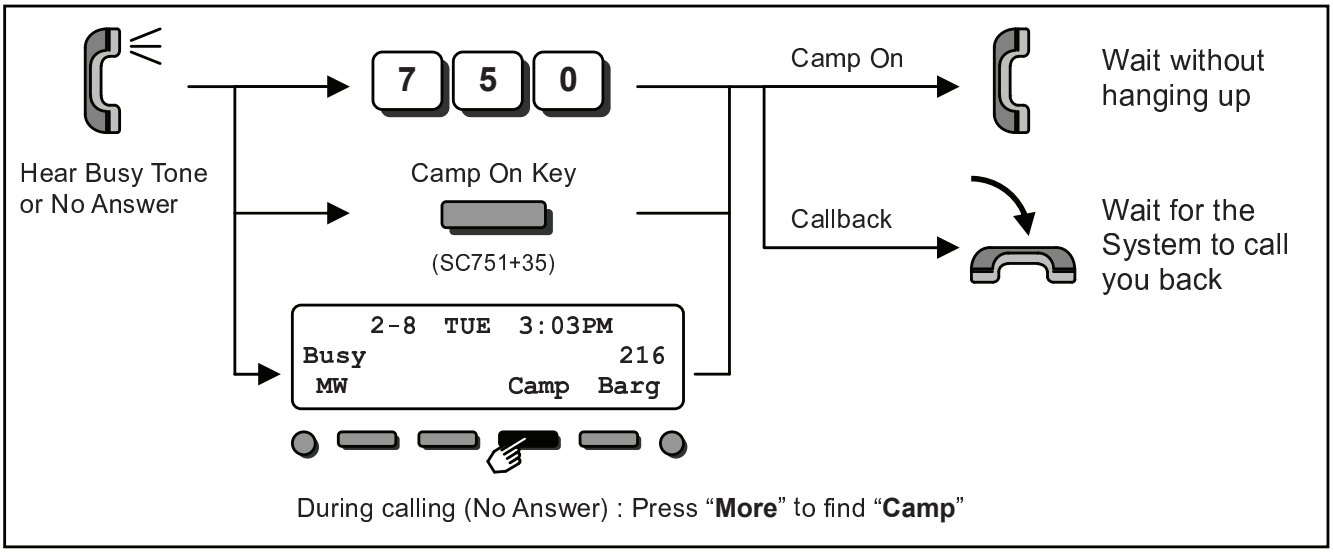

- *Camp On* *Intercom Call - When you hear ringing, wait for the called party to answer.*
  Outside Call - When you hear Dial Tone, begin telephone number dialing.
- *Callback* *Intercom Call - When your terminal starts the ringing, lift handset and wait for the called party to answer.*
  Outside Call - When your terminal starts the ringing, lift handset, hear Dial Tone, and begin telephone number dialing.
- *This function is applicable in case all trunks are busy condition (not applicable for dialed outside party busy).*

■ Cancel Camp On / Callback

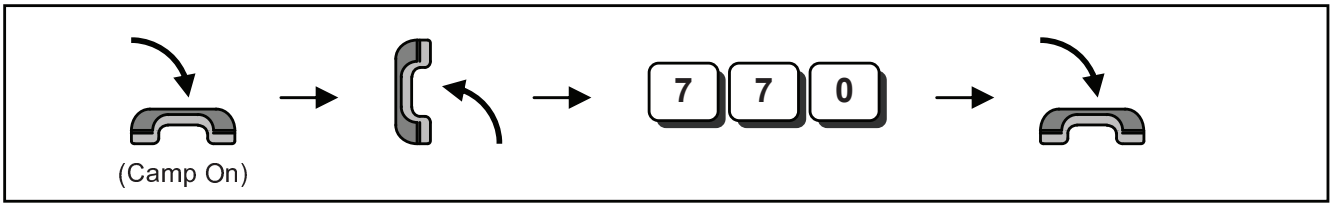

■ Repeat Dialing <Outside Call Only>

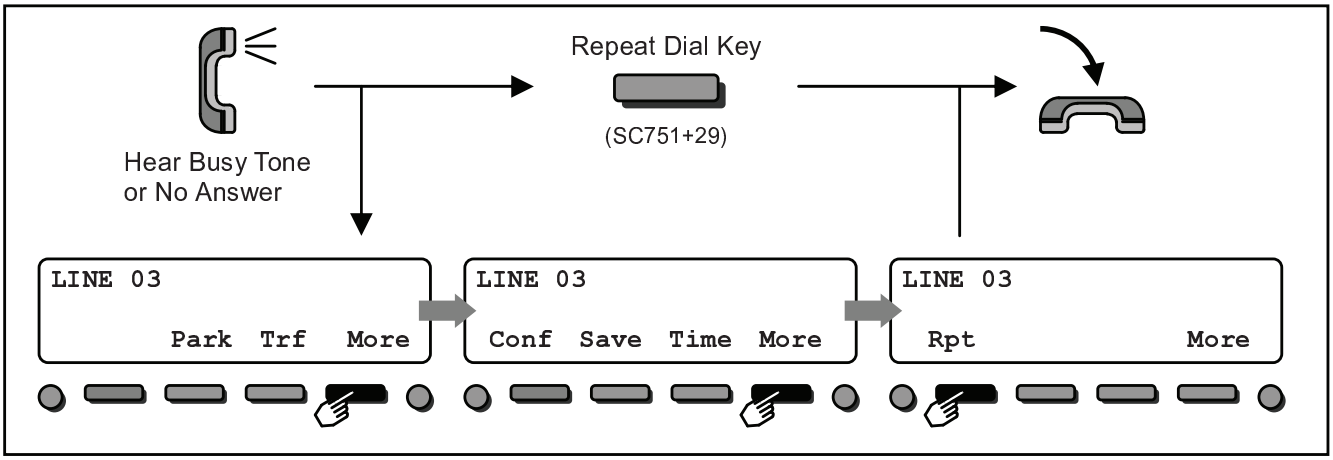

- *When the Repeat Dialing is set, Repeat Dial Key flashes and the system automatically and periodically redials a call. Repeat duration is programmable. Ask your NEC Authorized Supplier for the details.*
- *You should lift the handset when the called party answers.*
- *Press flashing Repeat Dial Key to cancel.*

If your call doesn't go through…

■ Set a Message Waiting

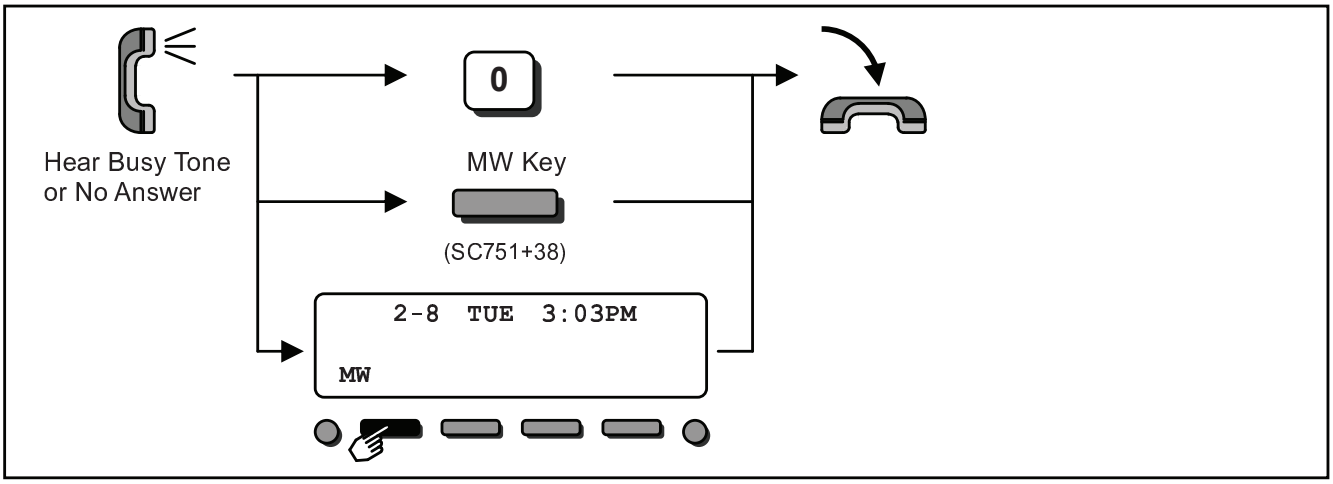

- *When you set a MW, the called party's Indicator starts to flash, and your Indicator is lit Red.*

■ Answer a Message Waiting *(Your terminal's Indicator is flashing Red)*

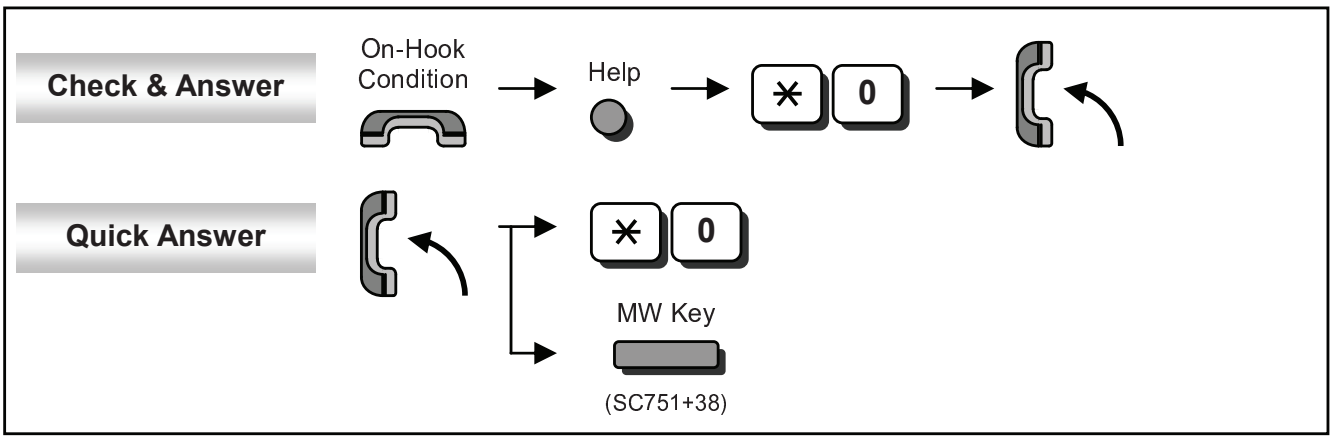

- *When you answer a MW, the Indicator automatically goes off when the called party answers.*
- *If multiple message are in queue, you can select the desired party by pressing Up key after dialing "*✳*, 0".*

■ Cancel Message Waiting

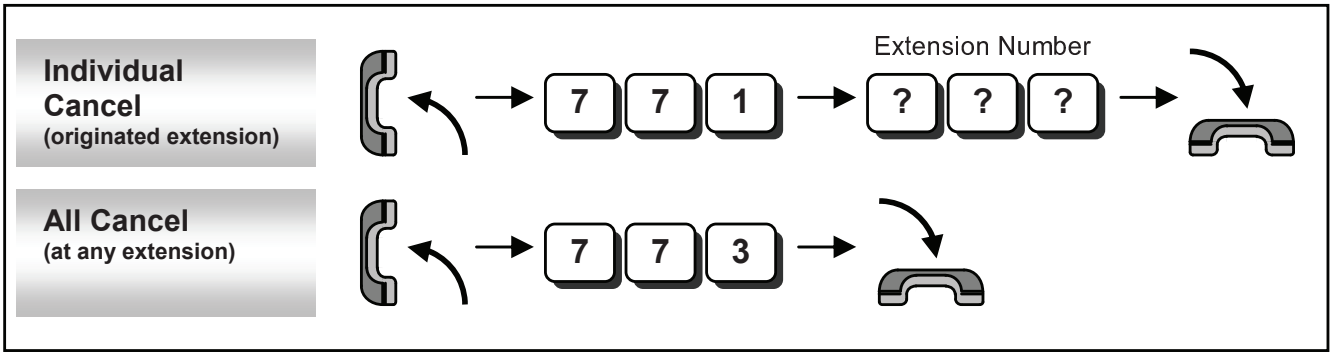

Answering Calls

■ Answering an Outside Call

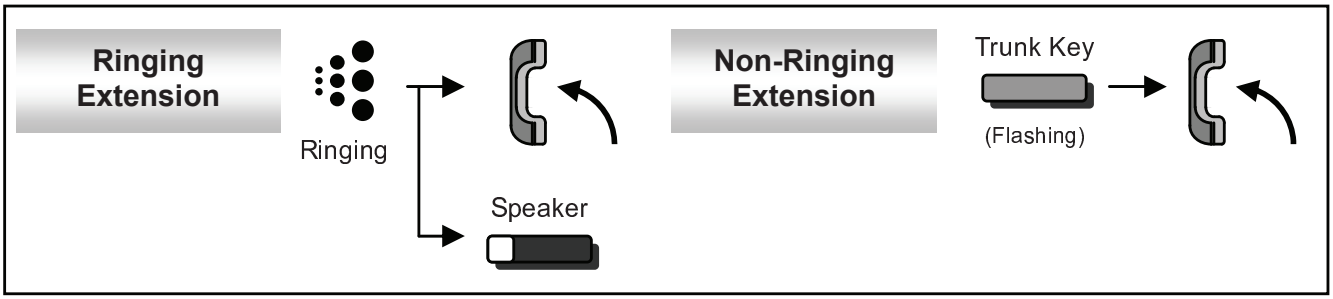

- *Confirm the status of Mute Key if you want to answer by Handsfree (Mute On : LED On, Mute Off : LED Off).*

■ Answering an Intercom Call

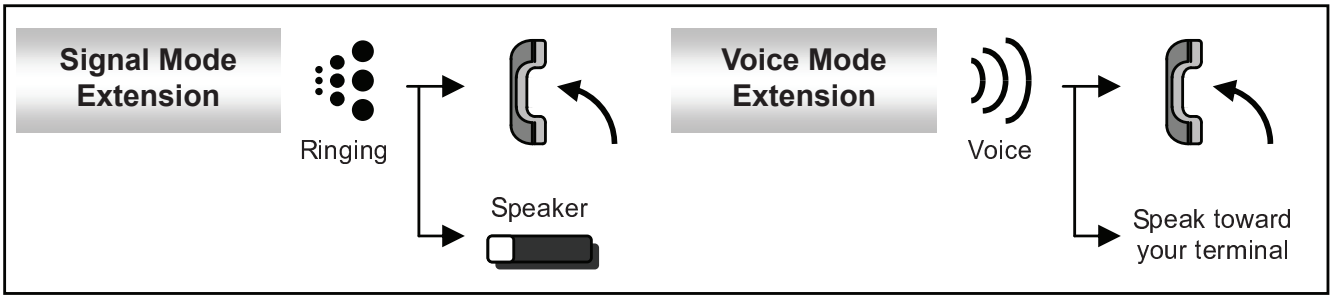

- *Intercom Call Mode (Signal or Voice) can be set at your terminal by :*
  "Signal" : ***Speaker -> 723*** *"Voice" :* ***Speaker -> 721***
- *Confirm the status of Mute Key if you want to answer by Handsfree. (Mute On : LED On, Mute Off : LED Off)*

■ Picking up a Call for other Extensions

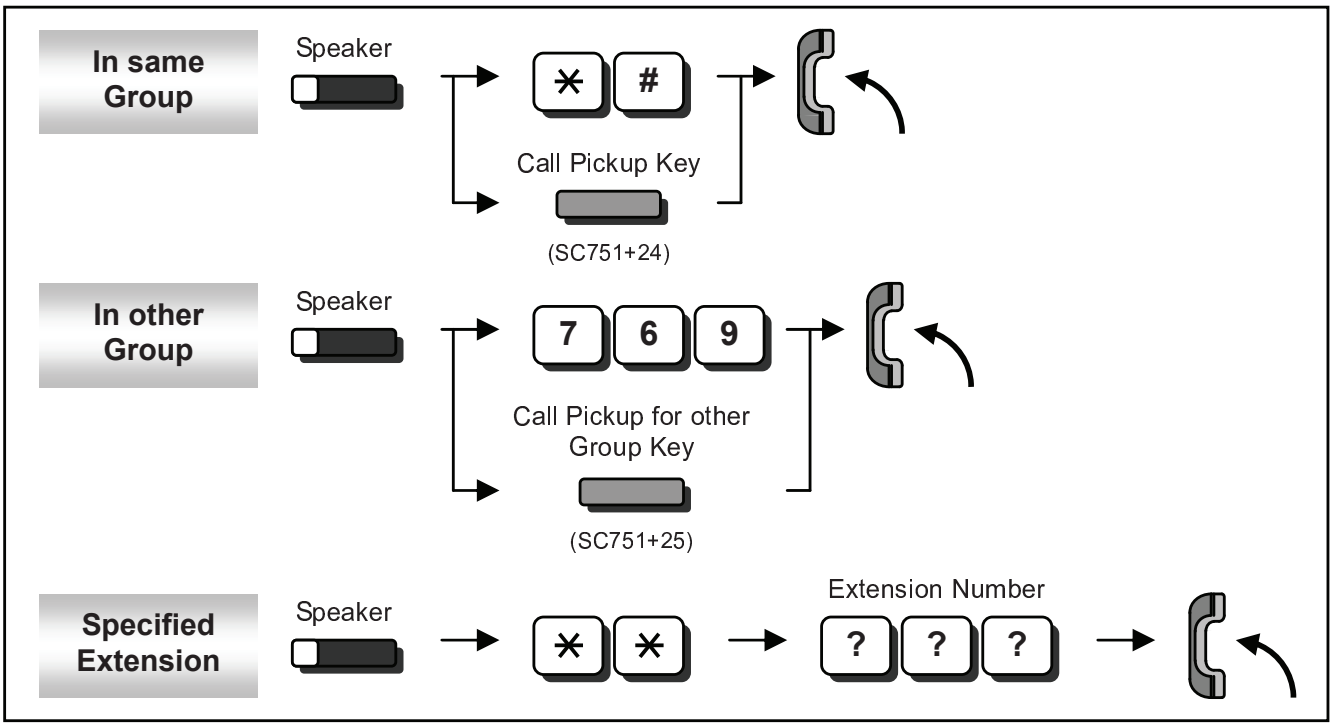

- *System setting is necessary to create a Call Pickup Group. Ask your NEC Authorized Supplier for the details.*
- *Call Pickup operations are available using Soft Key operation.*

Hold / Transferring Calls

■ Holding a Call / Retrieving a Held Call

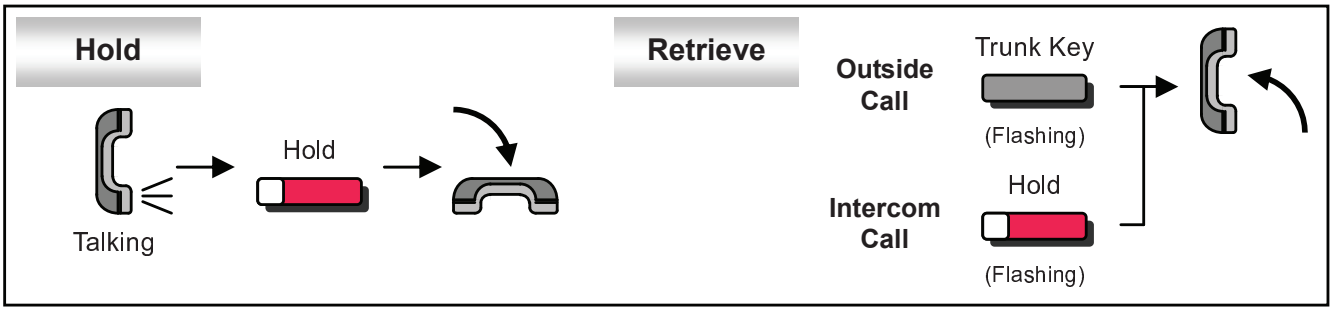

- *When on an Intercom, the call is held as "Exclusive Hold" on your terminal.*
- *This operation puts your outside call on System Hold. Other extension users can take the call off Hold.*

■ Holding a Call Exclusively

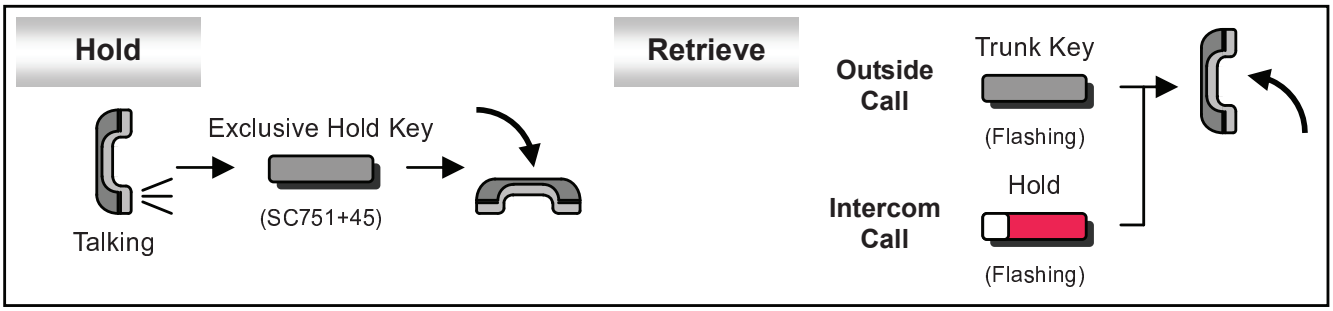

- *This operation puts your outside call on Exclusive Hold. Other extension users can not take the call off Hold.*

■ Retrieve a Held Outside Call

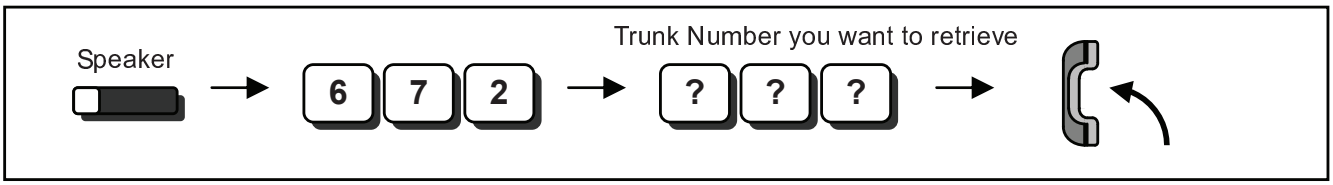

- *Ask your NEC Authorized Supplier for the details about your Trunk Number dialing digits.*

■ Transferring a Call to the other Extension

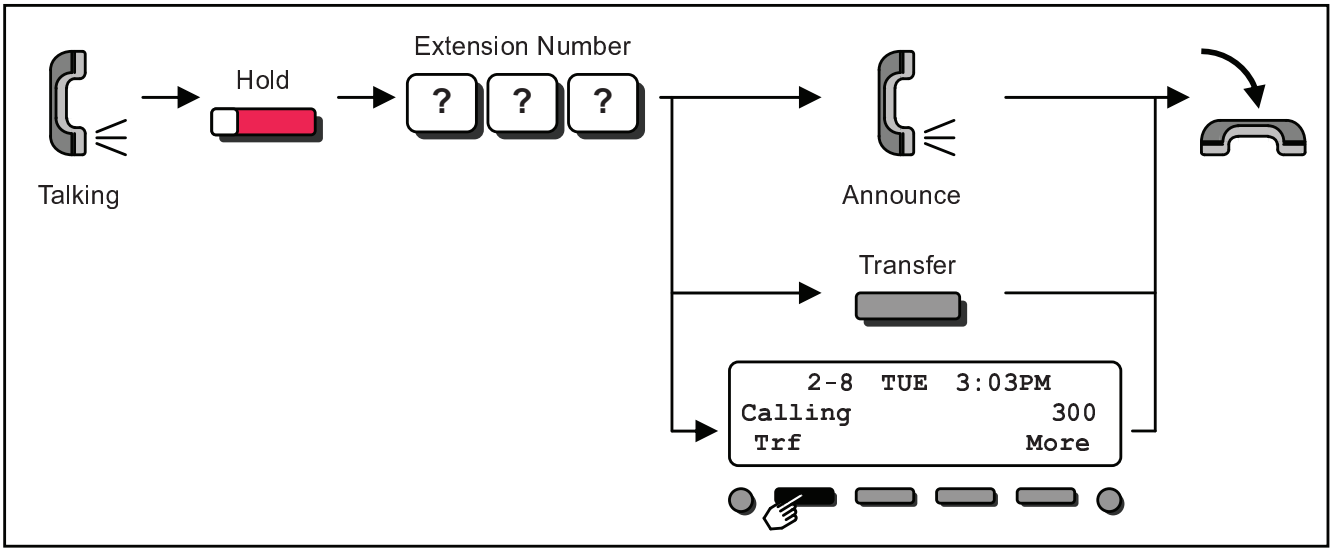

- *If your terminal has DSS/One-Touch key, just press it instead of "HOLD" and "Extension Number" dialing.*

For more Convenient Use…

■ Do Not Disturb (DND)

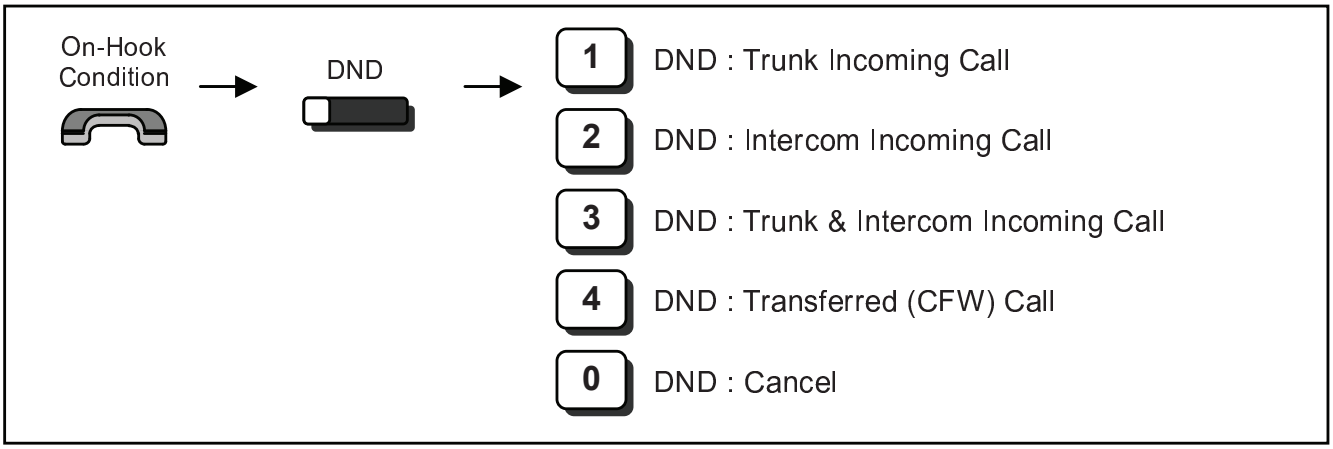

- *When you set DND function, DND/CONF Key is lit and the Internal Dial Tone pattern changes.*

■ Conference

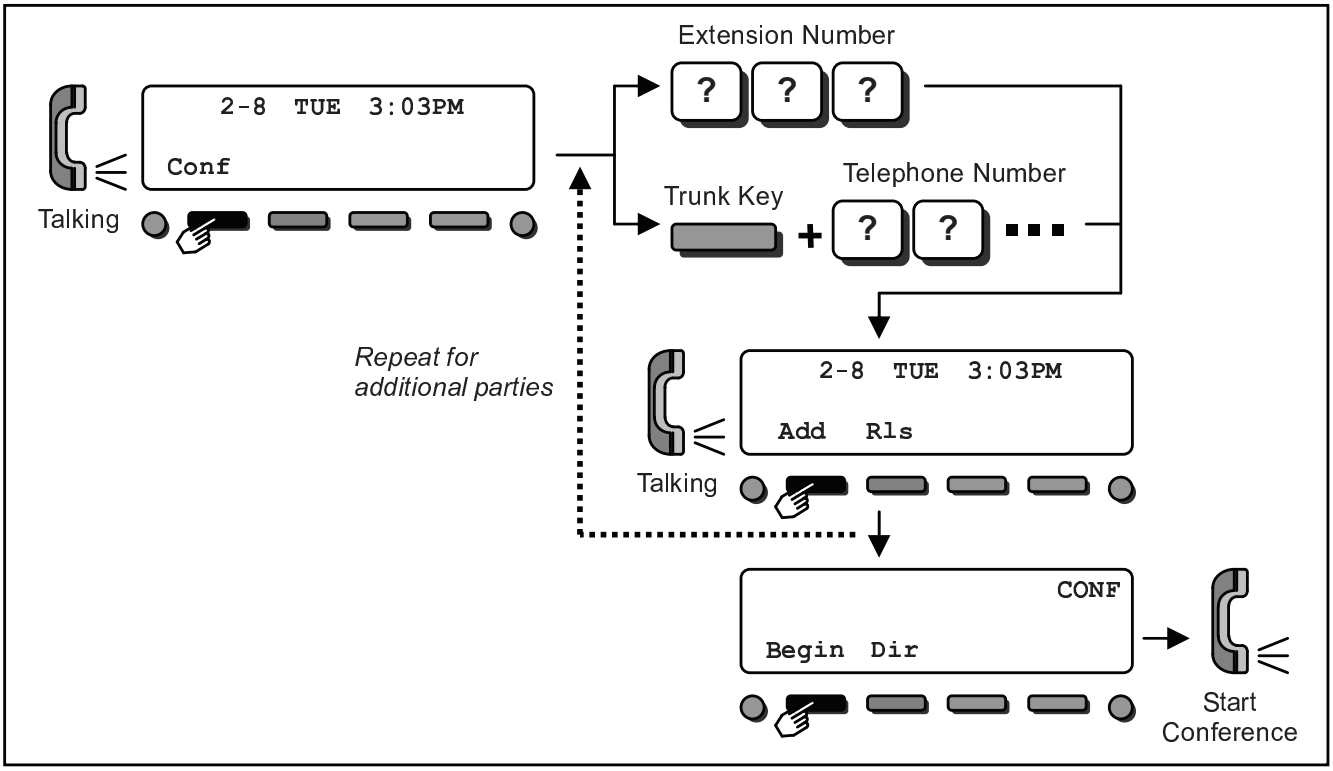

- *You can repeat this operation to add more parties.*
- *You may be able to have up to 16 parties (including your terminal). You may need to adjust the volume level due to the environment where calls are placed. Ask your NEC Authorized Supplier for the details.*

For more Convenient Use…

■ Call Forwarding / Follow Me

When you set Call Forward / Follow Me, the destination extension is displayed on the LCD and the Internal Dial Tone pattern is changed. (Call Forward / Follow Me can be set using a Soft Key).

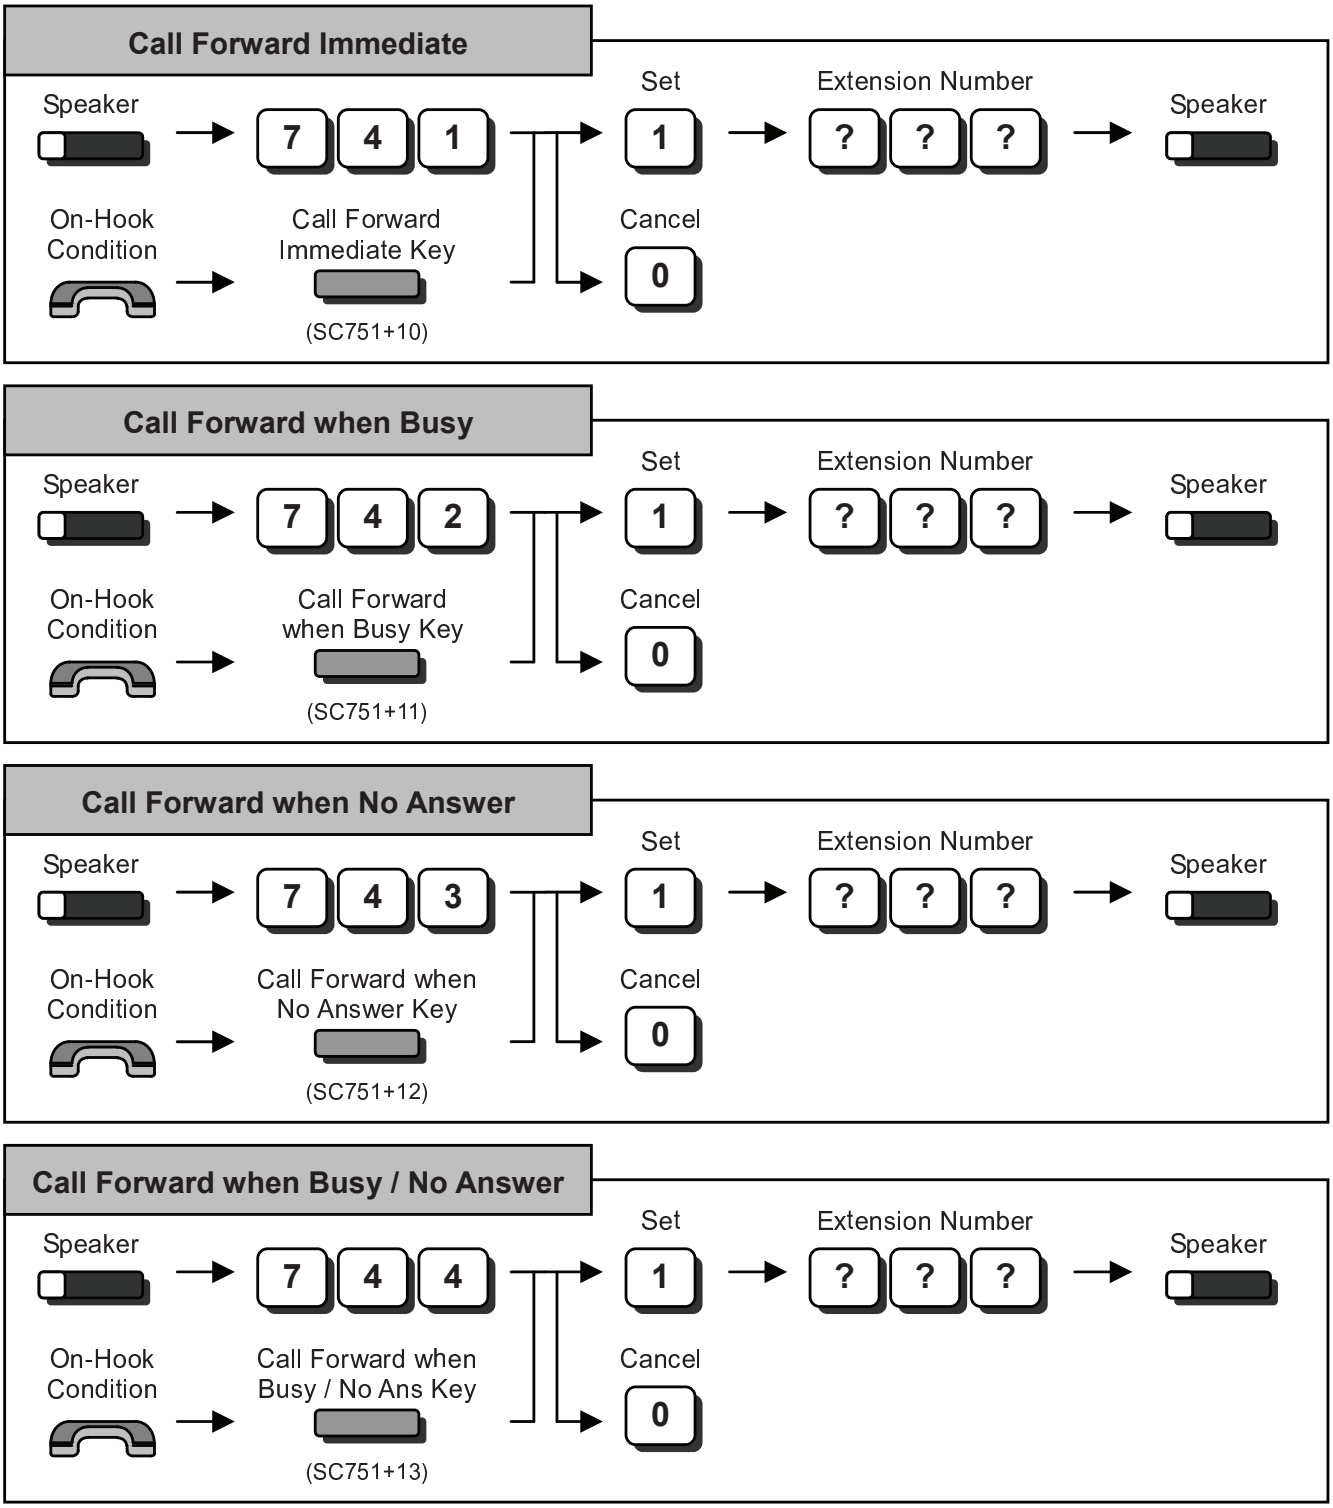

For more Convenient Use…

■ Call Forwarding / Follow Me *(Cont'd)*

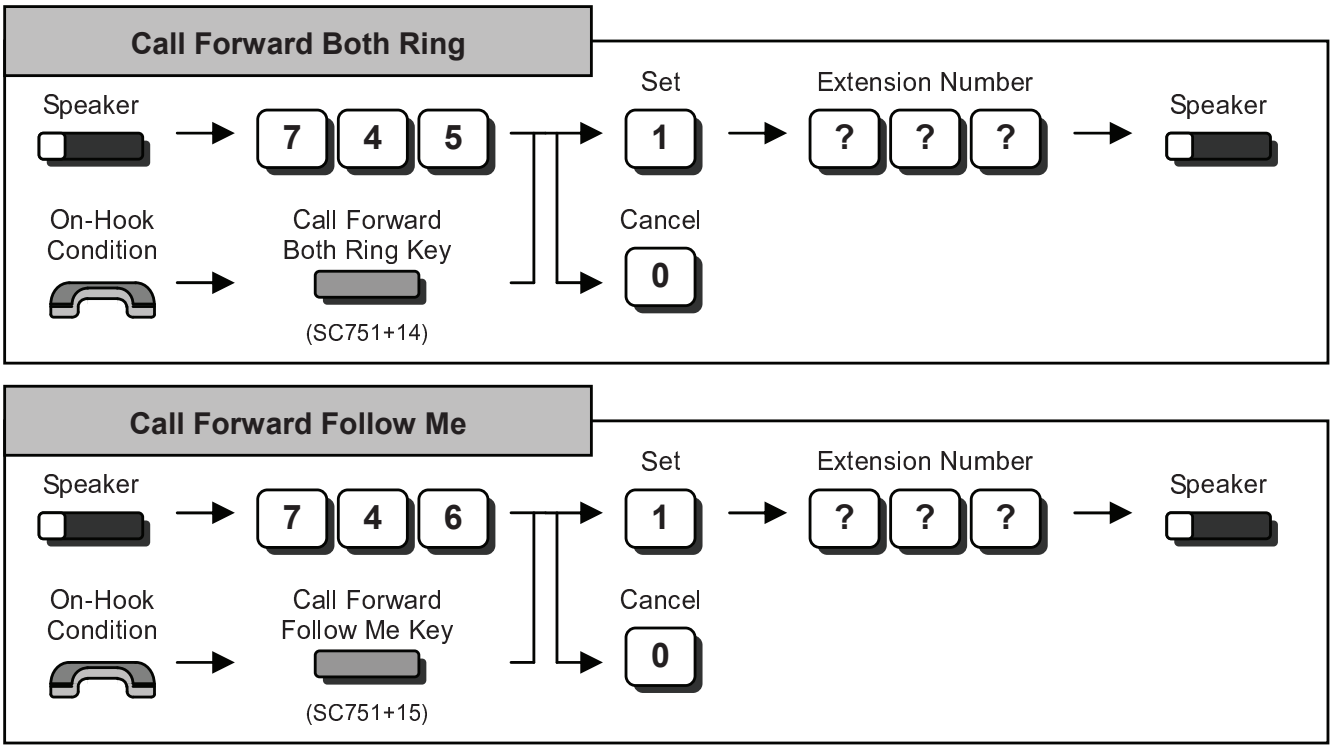

Soft Keys Operation

■ "Menu" Soft Key

The following table shows the menu structure of "**Menu**" Soft Key. You can reach the desired feature using the following operation.

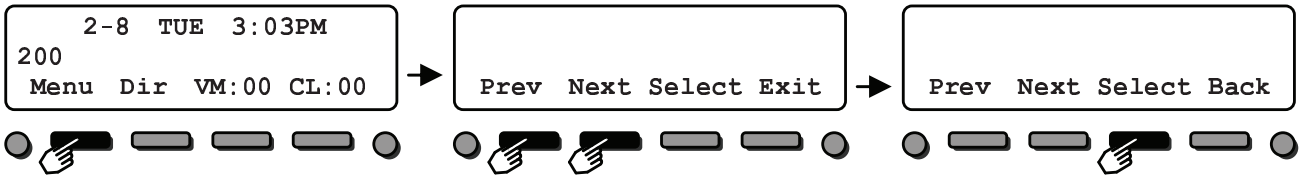

It is possible to search the desired feature by pressing Cursor the Keys (Up / Down / Right / Left) several times instead of "**Prev**" or "**Next**" Soft Keys, or it's possible to access the desired feature directly by dialing the 2 digit Menu Code after pressing the "**Menu**" Soft Key.

Item	Menu Code	Next Operation after pressing the "Select"
10 : Volume Preference	**11** : Ring **12** : Off-Hook Ring	Press "**Down**" or "**Up**" to adjust the selected option.
20 : Display Preference	**21** : Contrast **22** : Min Brightness **23** : Max Brightness	Press "**Down**" or "**Up**" to adjust the selected option.
30 : Feature Preference	**31** : Voice Announce **32** : Handsfree Reply **33** : Auto Call Timer **34** : Preview Dial **35** : Illuminated Dialpad **36** : Auto Call Screening **37** : Incoming Page **38** : Ringing Line Preference **39** : Auto Backlit	For the selected option, press "**On**" (enable) or "**Off**" (disable).
40 : Ring Preference	**41** : Intercom **42** : Line Keys	Press "**<<**" or "**>>**" to select and save option.
50 : Key Assignment	**51** : Feature Keys **52** : Primeline Key	Press "**<<**" or "**>>**" to select and save option.
60 : Call Forwarding	**61** : Immediate **62** : Ring No Ans **63** : Busy No Ans **64** : Call Forward AME **65** : Display Message **66** : Follow Me **67** : Both Ring	Press "**Set**" or "**Cancel**", enter the destination and select option to save.
70 : Speed Dial	**71** : Personal Speed Dial **72** : Company Speed Dial	Enter Bin number and Phone number, Name and save.
80 : Name and Language	**81** : Extension Name **82** : Display Language	For Name, enter the name using Alphanumeric Characters, For Language, press "**<<**" or "**>>**" to select and save.
90 : Option Preference	**91** : Headset Mode **92** : Headset Voice Announce **93** : System Information **94** : VoIPDB Information **95** : Auto Backlit (Threshold) **96** : IP Address Information	For Headset option, press "**On**" (enable) or "**Off**" (disable). For System / VoIPDB information (IP Address, MAC Address), press "**Select**". For Auto Backlit, select threshold option to save.
00 : Admin	**01** : Time **02** : Date **03** : Extension Name **04** : Clear All Call Fwd **05** : System Night Key Mode	For Time, Date and Extension Name, enter the Time, Date and Extension Number and Name to save. For Clear All Call Fwd, press "**Yes**".

Soft Keys Operation

■ "Dir" Soft Key

You can activate the Directory Dialing feature by pressing the "**Dir**" Soft Key.

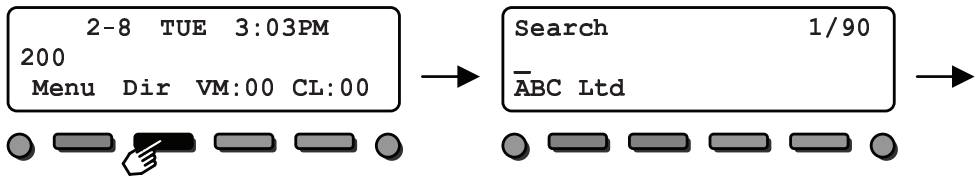

Refer to Page 6 "Directory Dialing"

■ "VM" Soft Key (Option)

The Number of new messages in your mailbox is displayed on the "**VM**" Soft Key; you can access your mailbox by pressing this key.

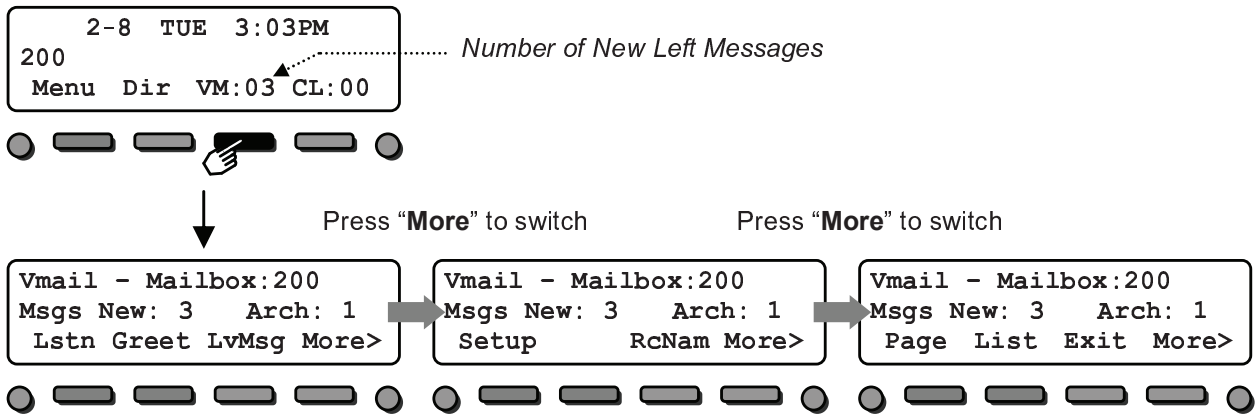

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Lstn	Listen to Left Messages	Press "**Next**" to play next message, press "**Rplay**" to repeat played message, press "**Del**" to delete played message. Press "**More**" for other Mailbox features.
Greet	Mailbox Greeting	Press one of "**Gr1**" / "**Gr2**" / "**Gr3**" to choose the desired personal greeting message, and press "**Lstn**" (Listen) / "**Rec**" (Record) / "**Del**" (Delete) to maintain it.
LvMsg	Leave Message	Start message recording and press "**Done**" to complete it. Dial extension number you want to send this message and press "**Send**".
Setup	Mailbox Option Menu	Press "**Code**" (Security Code) / "**Notfy**" (Message Notification) / "**CallH**" (Call Handling Option) / "**ATime**" (Auto Time Stamp) to maintain each mailbox option.
RcNam	Name Menu	Press "**Lstn**" (Listen) / "**Rec**" (Record) / "**Del**" (Delete) to maintain the Mailbox Name.
Page	Page Message Menu	Press "**Lstn**" (Listen) / "**Rec**" (Record) / "**Del**" (Delete) to maintain the Paging Message.
List	Message List	Press "**All**" / "**New**" / "**Arch**" to set the message listen mode (message list) which you want to listen.
Exit	Exit VM Menu	- - -

Soft Keys Operation

■ "CL" Soft Key

Number of new unanswered calls is displayed on the "**CL**" Soft Key; you can access your Caller-ID List by pressing this key.

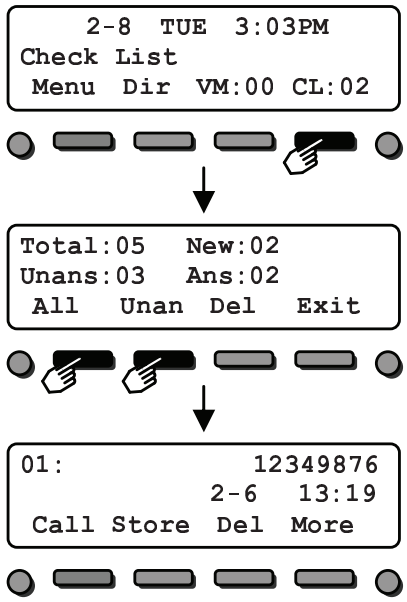

Soft Key Indication	Feature	Next Operation after pressing Soft Key
All	All Incoming Calls List	See below
Unan	Unanswered Calls List	See below
Del	Delete List	Press "**Yes**" to delete all Caller-ID List. (or press "**No**" to cancel)
Exit	Exit from Summary	- - -

Press "**More**" to switch

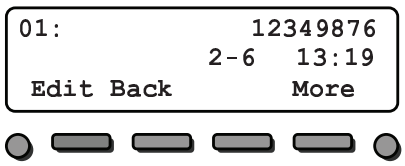

Press "VOL Up / Down" Keys to select the desired number.

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Call	Call to displayed number	Lift the handset to talk when the destination answered.
Store	Store displayed number	Press "**STA**" (Personal Speed Dial) or "**Abb**" (Common Abbreviated Dial), and dial Bin Number to store the displayed number with name. (Press Hold Key to save.)
Del	Delete displayed number	Next received Caller-ID shall be automatically displayed, and continue the Caller-ID Soft Key operation.
Edit	Edit displayed number	Press "**<-**" or "**->**" to change the cursor position, press "**DEL**" to delete a digit, and dial new digit. (Press Hold Key to save.) Press "**CNCL**" to cancel Edit Mode.
Back	Return to Summary	Continue the Caller-ID Soft Key operation.

Soft Keys Operation

■ Soft Key Operations during Off-Hook condition

When you press the Speaker Key or lift the handset you will see the following Soft Keys.

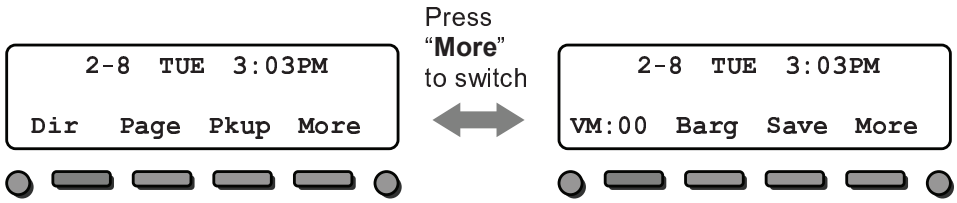

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Dir	Directory Dialing	Refer to Page 6 for Directory Dialing operation.
Page	Paging	Press "**InPg**" (Internal Paging) or "**ExPg**" (External Paging), and dial the Group/Zone number to page.
Pkup	Call Pickup	Press "**Pers**" for Extension Call Pickup. Press "**ExPg**" for External Paging pickup. Press "**InPg**" for Internal Paging pickup.
VM:00	Mailbox Access	Refer to Page 16 (VM Soft Key).
Barg	Barge-In	Dial the target extension number to barge in.
Save	Saved Number Dial	Saved number is dialed automatically. Wait for answer.

■ Soft Key Operations during Intercom Calling

During Intercom calling (called party does not answer yet) you will see the following Soft Keys.

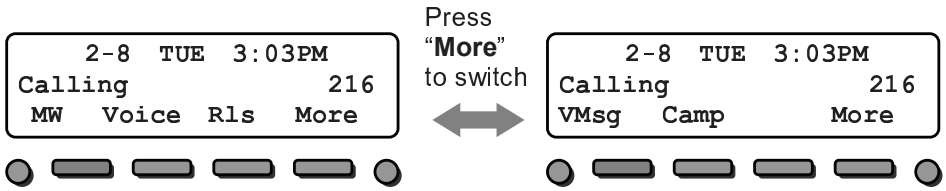

Soft Key Indication	Feature	Next Operation after pressing Soft Key
MW	Message Waiting	Message Waiting is set. Hang up to finish.
Voice (Signal)	Intercom Call Mode Switching (Signal / Voice)	Signal -> Voice : Start to talk after beep tone. Voice -> Signal : Wait for called party answer. Press "**Voice**" (or "**Signal**") again to switch Call Mode, if necessary.
Rls	Hang Up	- - -
VMsg	Leave a Message (In-Mail) (Option)	Start recording your message.
Camp	Camp On / Callback	Camp On Wait for the system to call you back without hanging up. Callback Hang up and wait for the system to call you back.

Soft Keys Operation

■ Soft Key Operations after establishing an Intercom Call

After establishing an Intercom call, access following feature using Soft Keys.

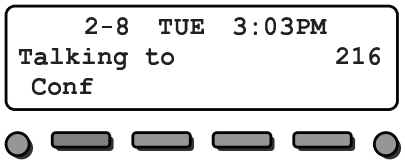

Refer to Page 12 "Conference"

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Conf	Conference	Dial the desired extension number, or seize an idle trunk and place a call to establish a conference. Press "**Add**" to invite the other party, or press "**Add**" and "**Begin**" to start a conference. Press "**AnHd**" to retrieve a held call.

■ Soft Key Operations during Outside Call

When you seize a trunk for outgoing call, or you answered an incoming call, access following features using Soft Keys.

(When you seize a Trunk)

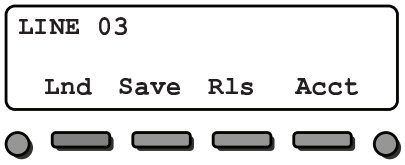

After establishing call and pass 4 seconds

Press "**More**" to switch

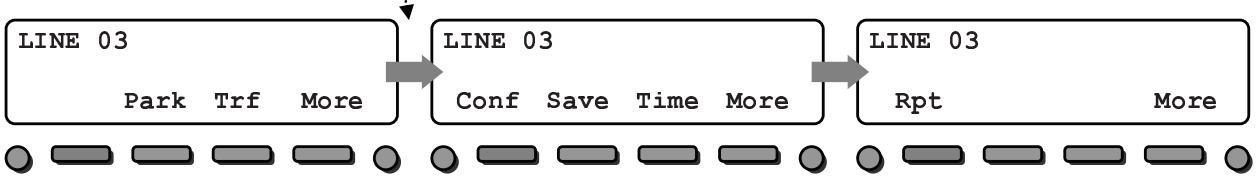

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Lnd	Last Number Dialing	Last dialed number is dialed automatically. Wait for answer.
Save	Saved Number Dialing	Saved number is dialed automatically. Wait for answer.
Rls	Hang Up	- - -
Acct	Account Code Entry (Option)	Enter the Account Code.

Soft Key Indication	Feature	Next Operation after pressing Soft Key
Lnd	Last Number Dialing	Last dialed number is dialed automatically. Wait for answer.
Park	Park Hold	Press "**Sys**" (System Park) or "**StaP**" (Extension Park) to select type of Park Hold.
Trf	Transfer	Dial the desired extension number, or seize an idle trunk and place a call to transfer.
Conf	Conference	Dial the desired extension number, or seize an idle trunk and place a call to establish a conference. Press "**Add**" to invite the other party, or press "**Add**" and "**Begin**" to start a conference. Press "**AnHd**" to retrieve a held call.
Save	Save dialed Number	- - -
Time	Call Duration Time Indication	Press "**Time**" again to turn off the Call Duration Time indication.
Rpt	Repeat Dialing	Repeat Dialing feature is set, and the system automatically places a call periodically. Wait for answer.

Cursor Keys Operation

■ Menu Structure when PRG15-02-60 is set to Advanced Mode 1

The following table shows the menu structure of the Cursor Keys. You can reach the desired menu by pressing Navigation Keys (Up / Down / Right / Left) or dial 3 digits for shortcut access after pressing the "Enter Key" to activate a menu.

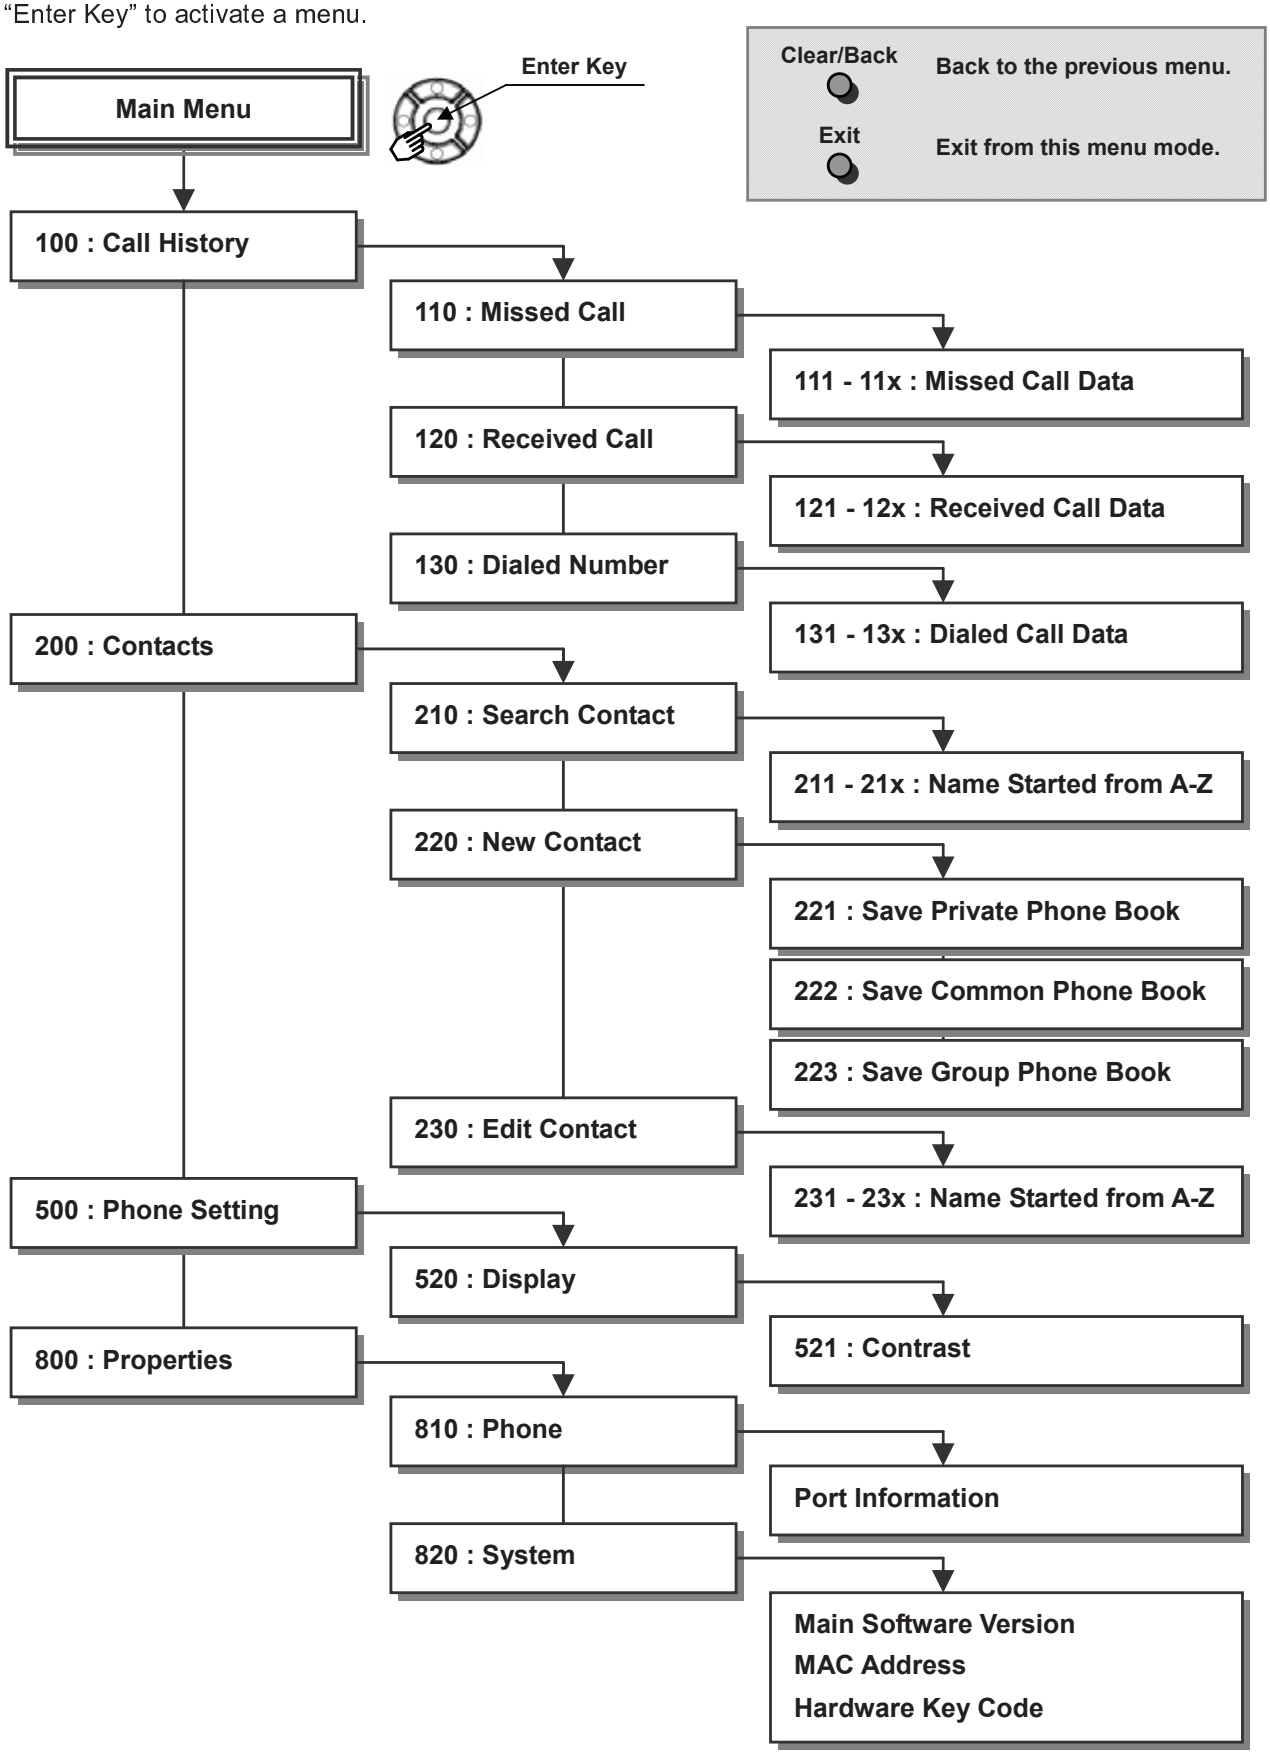
Enter Key
Clear/Back
Back to the previous menu.
Exit
Exit from this menu mode.
Main Menu
100 : Call History
110 : Missed Call
111 - 11x : Missed Call Data
120 : Received Call
121 - 12x : Received Call Data
130 : Dialed Number
131 - 13x : Dialed Call Data
200 : Contacts
210 : Search Contact
211 - 21x : Name Started from A-Z
220 : New Contact
221 : Save Private Phone Book
222 : Save Common Phone Book
223 : Save Group Phone Book
230 : Edit Contact
231 - 23x : Name Started from A-Z
500 : Phone Setting
520 : Display
521 : Contrast
800 : Properties
810 : Phone
Port Information
820 : System
Main Software Version
MAC Address
Hardware Key Code

Built-In Answering Machine (VRS Message)

System setting is necessary to use a Built-In Answering Machine. Ask your NEC Authorized Supplier for the details.

■ Record / Listen / Erase Answering Messages

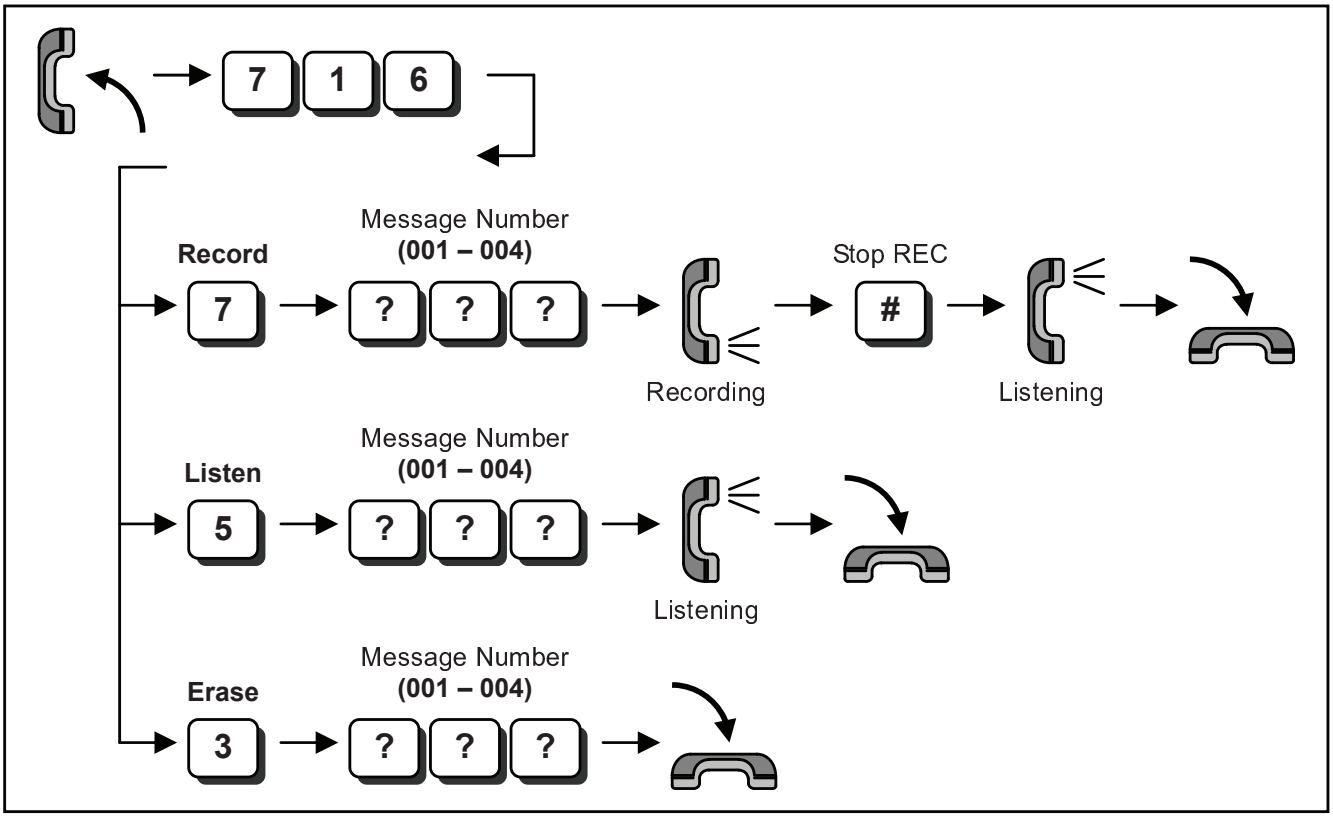

- *Up to 4 types of messages can be recorded.*
- *The message length can not exceed 2 minutes.*

Built-In Answering Machine (Voice Mail Message)

■ Listen / Erase Left Messages

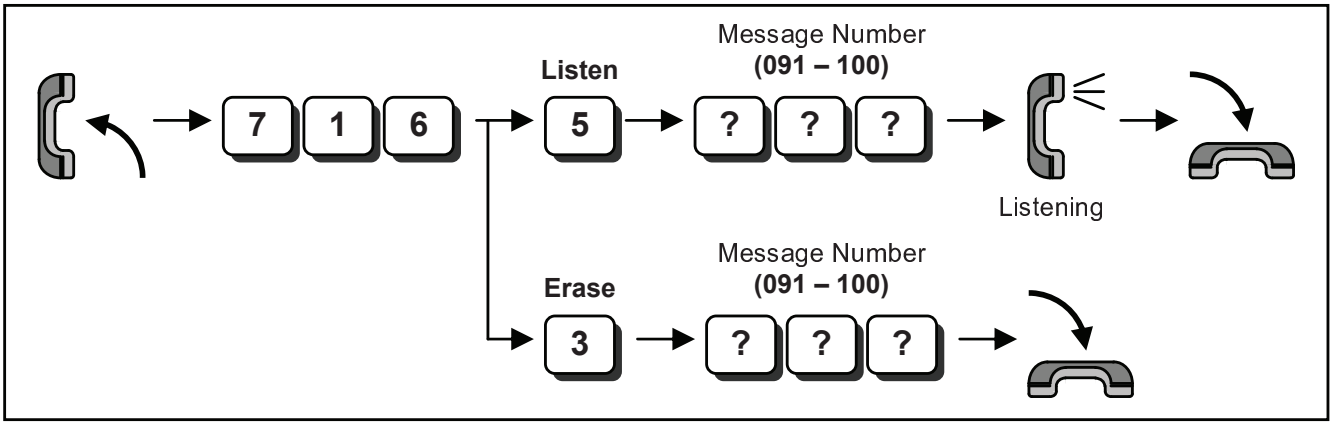

- *A maximum of 10 messages can be left by outside callers.*
- *The message length can not exceed 2 minutes.*

Option : In-Mail (Voice Mail)

Optional hardware and System setting is necessary to use In-Mail (Voice Mail) feature. Ask your NEC Authorized Supplier for the details.

■ Log-On to the In-Mail

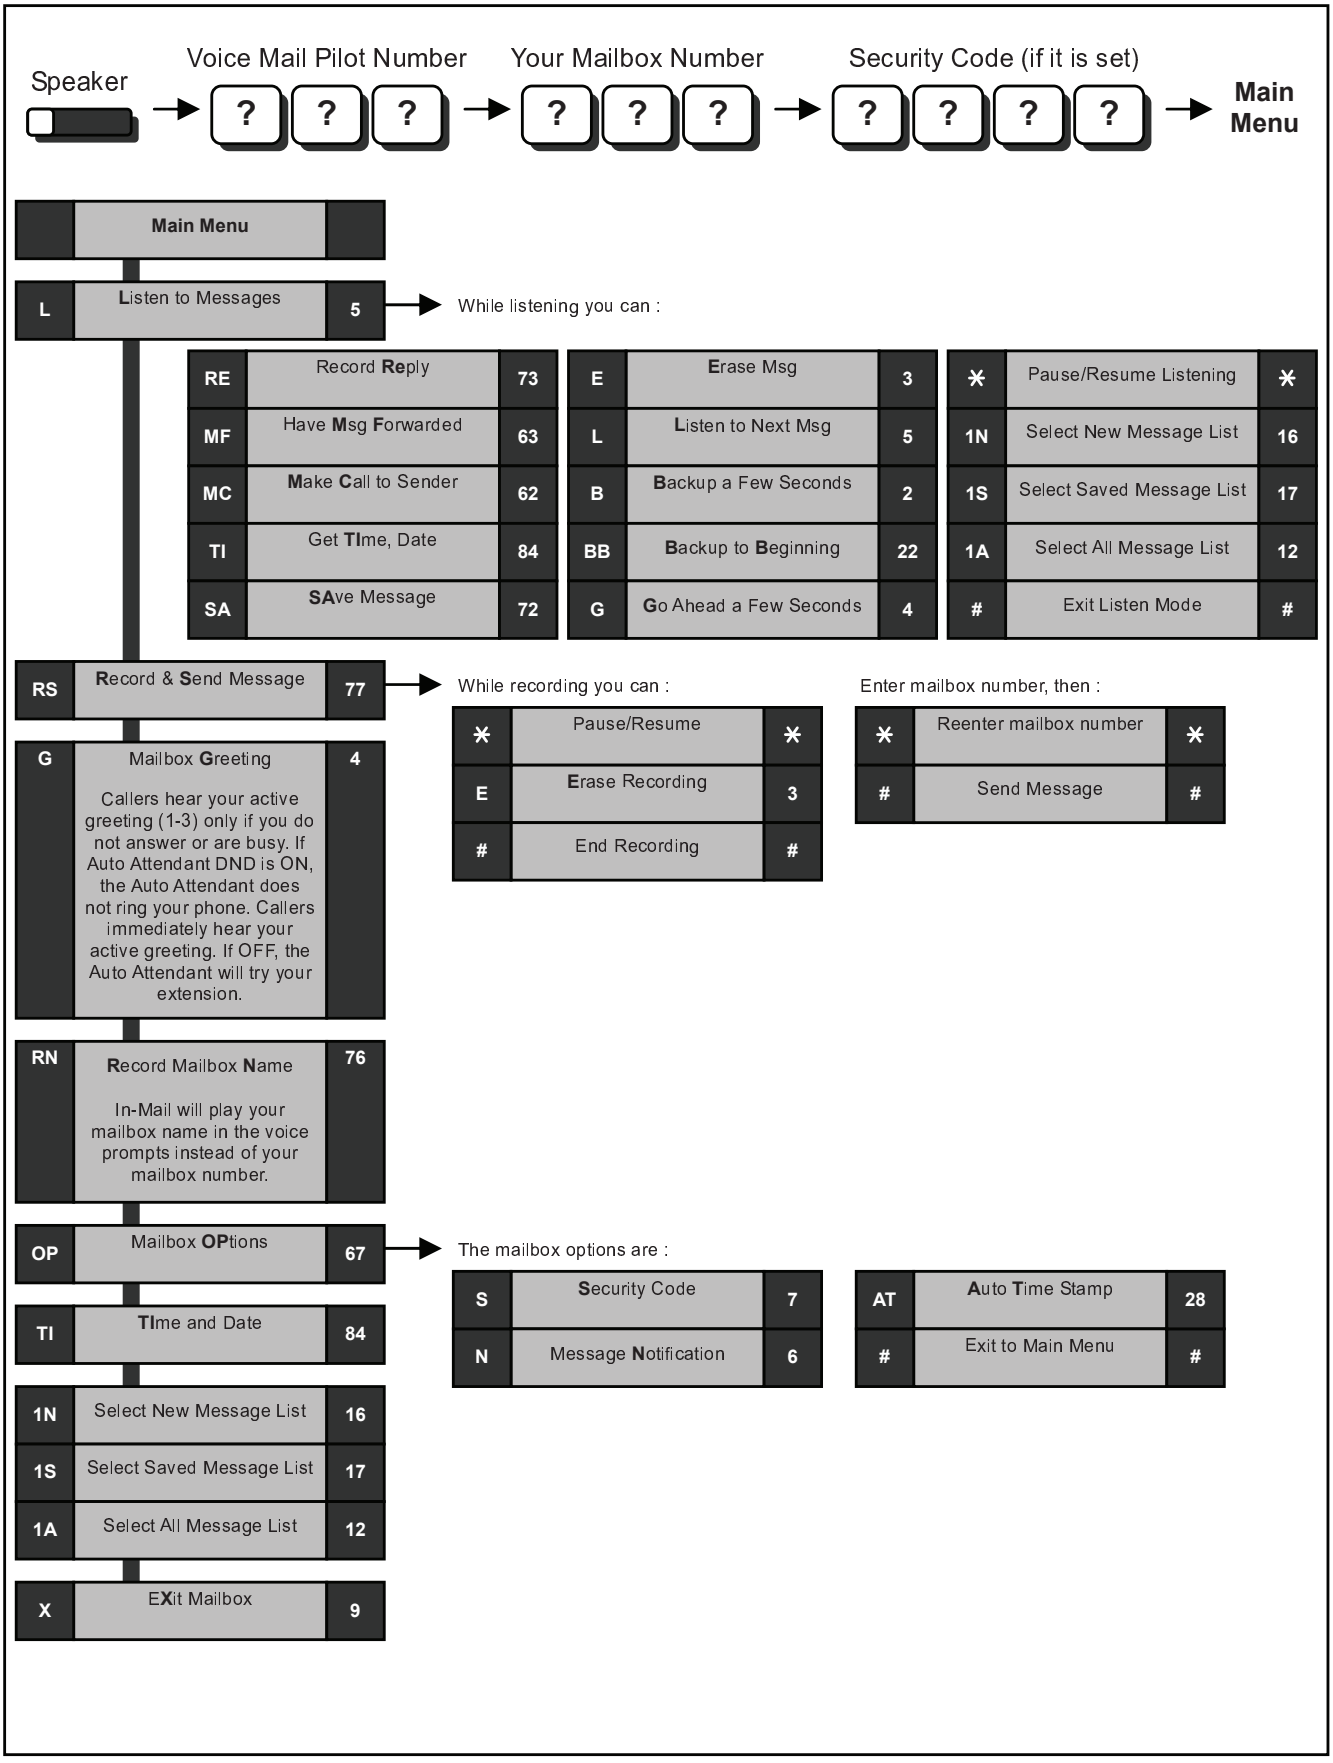
Speaker
Voice Mail Pilot Number
Your Mailbox Number
Security Code (if it is set)
? ? ?
? ? ?
? ? ? ?
Main Menu
Main Menu
L Listen to Messages 5
While listening you can :
RE Record Reply 73
MF Have Msg Forwarded 63
MC Make Call to Sender 62
TI Get TIme, Date 84
SA SAve Message 72
E Erase Msg 3
L Listen to Next Msg 5
B Backup a Few Seconds 2
BB Backup to Beginning 22
G Go Ahead a Few Seconds 4
* Pause/Resume Listening *
1N Select New Message List 16
1S Select Saved Message List 17
1A Select All Message List 12
Exit Listen Mode
RS Record & Send Message 77
While recording you can :
* Pause/Resume *
E Erase Recording 3
End Recording
Enter mailbox number, then :
* Reenter mailbox number *
# Send Message #
G Mailbox Greeting 4
Callers hear your active greeting (1-3) only if you do not answer or are busy. If Auto Attendant DND is ON, the Auto Attendant does not ring your phone. Callers immediately hear your active greeting. If OFF, the Auto Attendant will try your extension.
RN Record Mailbox Name 76
In-Mail will play your mailbox name in the voice prompts instead of your mailbox number.
OP Mailbox OPtions 67
The mailbox options are :
S Security Code 7
N Message Notification 6
AT Auto Time Stamp 28
Exit to Main Menu
TI TIme and Date 84
1N Select New Message List 16
1S Select Saved Message List 17
1A Select All Message List 12
X EXit Mailbox 9

Option : In-Mail (Voice Mail)

■ Call Forward to Voice Mail

Convenient Operation by Function Key

On-Hook Condition → Auto-Attendant Key (SC751+79 + Ext No.)

Press "Automated Attendant" Key several times to change the status. (All Calls -> No Answer -> Busy -> Busy/No Answer -> Cancel)

Forward All Incoming Calls

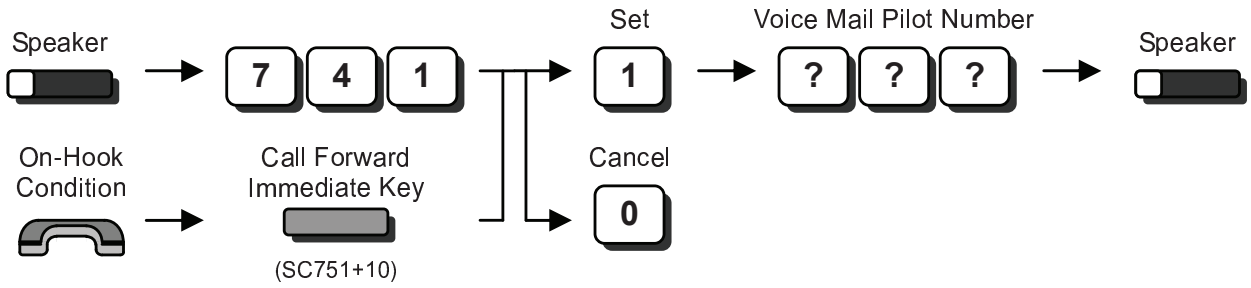

Forward Incoming Call when Busy

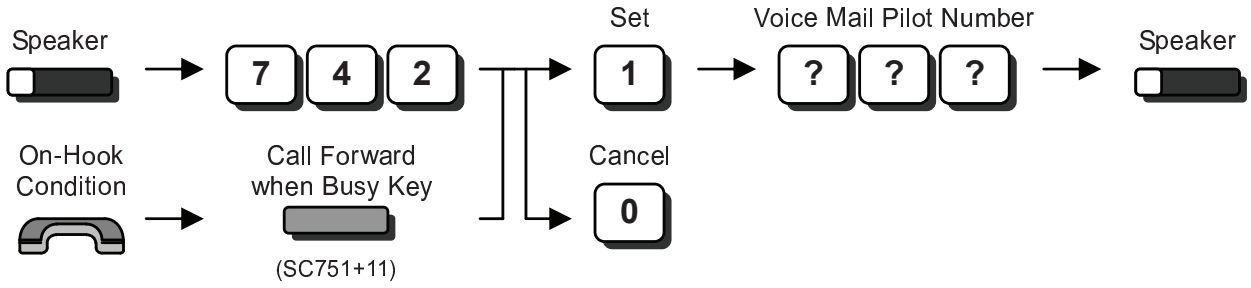

Forward Incoming Call when No Answer

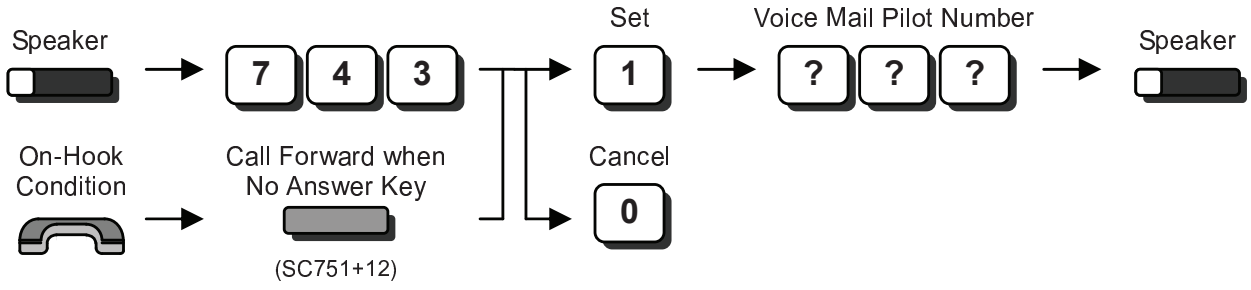

Forward Incoming Call when Busy / No Answer

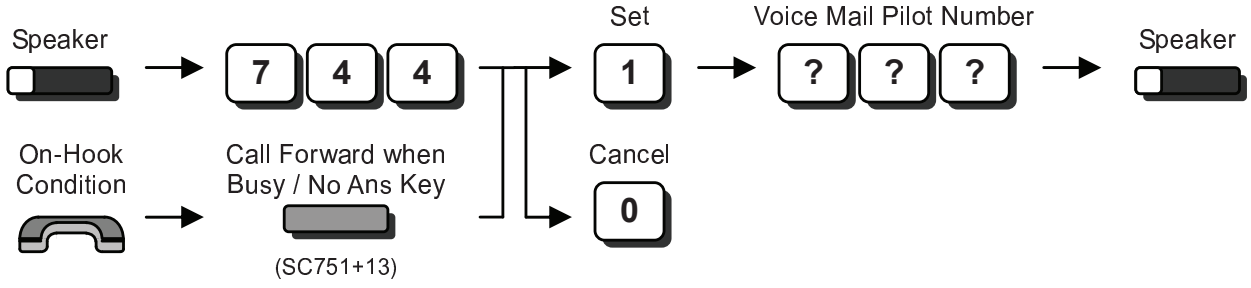

Option : In-Mail (Voice Mail)

■ Mailbox Greeting

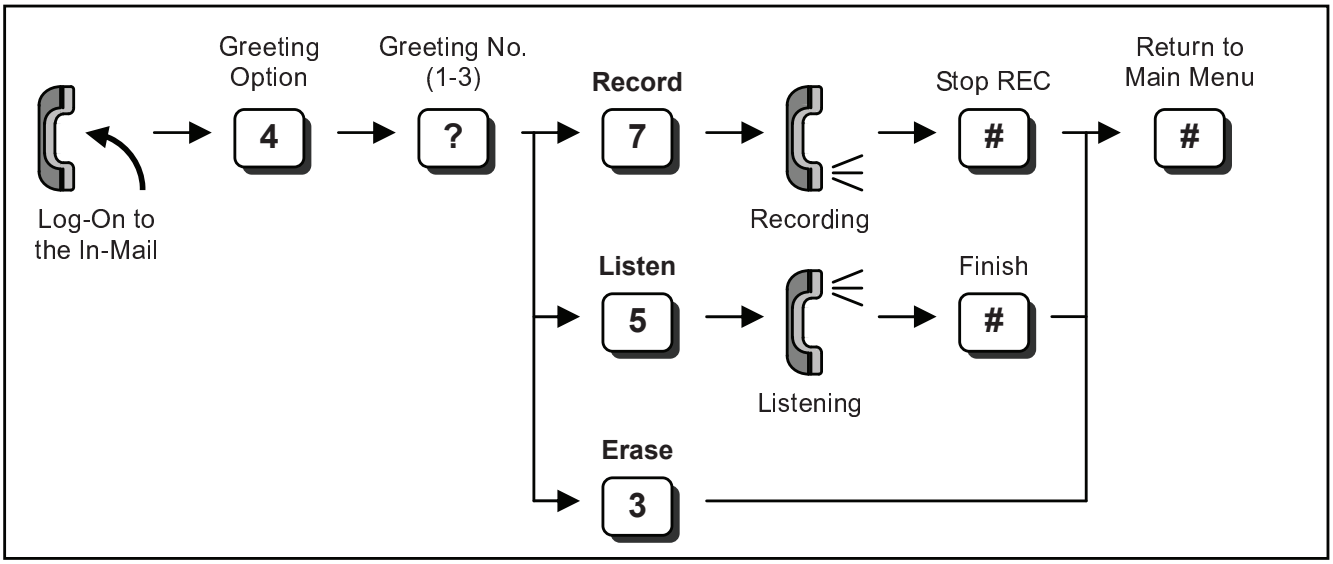

- *Selected Greeting (one of three) becomes active.*

■ Mailbox Security Code

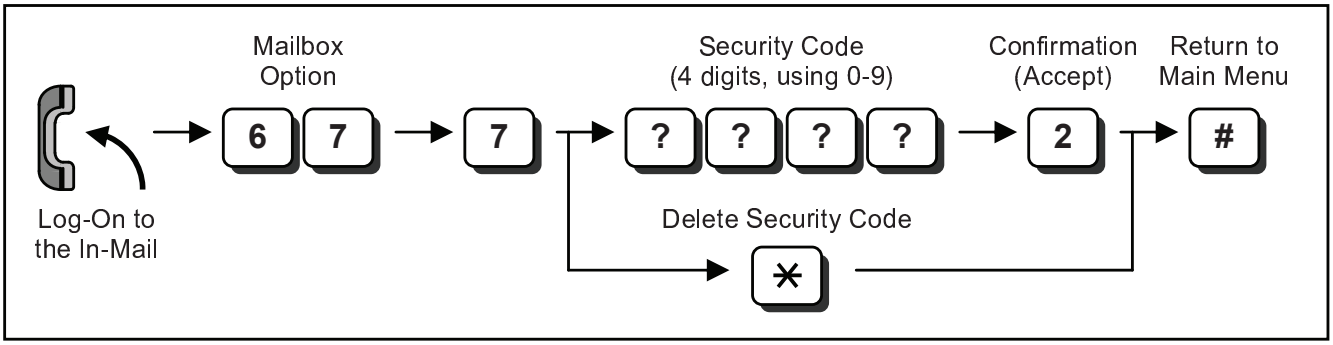

- *Dialed Security Code can be canceled by pressing "4" instead of "2 (Accept)".*
- *In case the "In-Mail Advanced Features License (SL-VM-ADVANCE LIC)" is provided, or during Free Trial period (60 days after new installation), the type of Security Code can be assigned as below.*
  - Dial 4 digits Security Code followed by "7" : Security Code for all log-on
  - Dial 4 digits Security Code followed by "6" : Security Code for remote log-on only
- *System Administrator can delete a Mailbox Security Code.*

Option : In-Mail (Voice Mail)

■ Listen to Left Messages in your Mailbox

Convenient Operation by Function Key

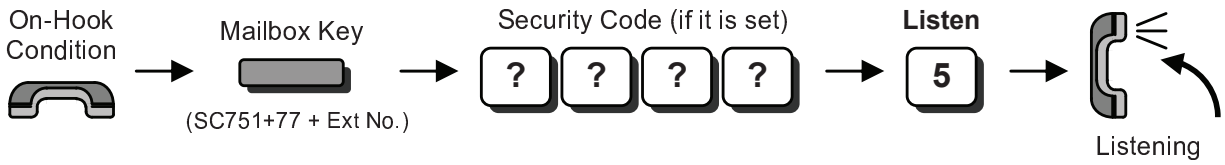

Convenient Operation by Soft Key

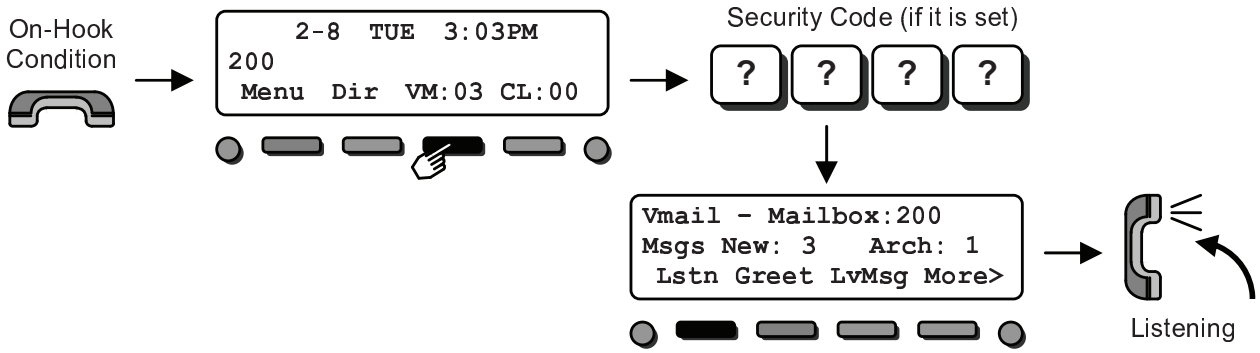

Basic Operation without Function Key

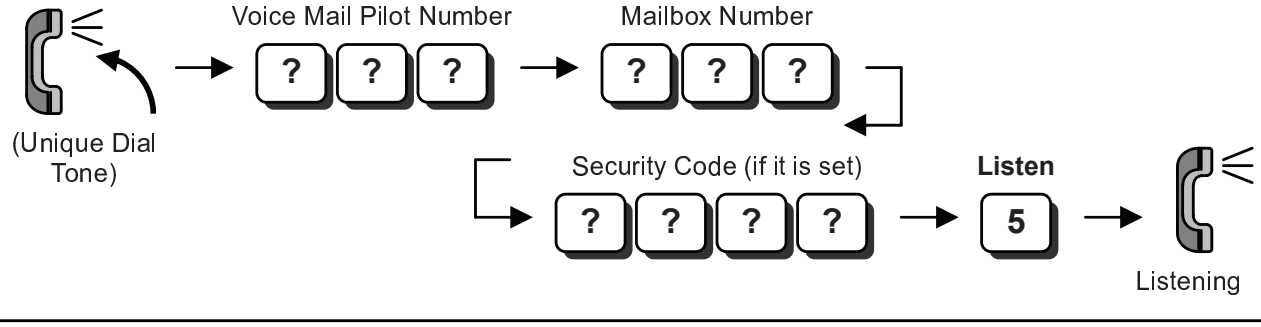

Memo

SL1100

Multi-Line Terminal
User Guide

A50-031929-003 NA
Issue 1.0
June 2011

NEC Corporation